



INSTALLATION INSTRUCTIONS

Part Number 33-2122

This filter fits: **See current K&N catalog for complete listing**

FREE K&N DECAL** To register your warranty, please see us online at knfilters.com/register. **FREE K&N DECAL

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last 1 million miles or more. This filter is a direct replacement for the stock air filter, and no modifications will be required. However the following procedure **MUST** be followed to ensure a proper fit and seal of the K&N Air Filter.

INSTALLATION

1. Loosen the clamp on the air intake tube and disconnect the tube from the airbox lid.
2. Disconnect the breather hose from the airbox lid.
3. Remove the airbox lid and wipe off any dust or dirt from inside of the lid.
4. Remove the stock air filter.
5. The k&n replacement air filter has three tabs on the sides, one on the short side and two on the long side. The air filter must be installed so that each of the three tabs are placed next to each of the three clips that are on the airbox base.
6. Using the supplied tubes of grease, liberally apply a bead of grease between the two ribs on the air filter. This bead must go around the entire perimeter of the filter and be at least 1/8" above the top of the two ribs. (Fig. 3)
7. Reinstall the airbox lid by first positioning the lid just below the radiator filler cap and at the same time engaging the very front slot on the lid around the tab on the base and working towards the rear in the same way. (Fig. 1) You must keep the lid open as much as possible while doing this so that the air filter seats properly. (Fig. 2)
8. Fasten the three clip.
9. Reinstall the air intake tube and the breather hose in the reverse order of removal.

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.

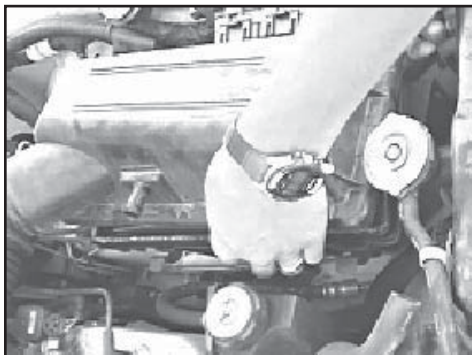


Fig. 1



Fig. 2

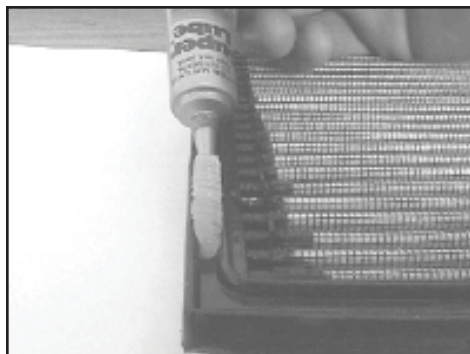


Fig. 3