



INSTALLATION INSTRUCTIONS

Part Number: E-0638

This filter fits: SEE CATALOG FOR CURRENT APPLICATIONS

* FREE K&N® decal To register your warranty, please see us online at knfilters.com/register. FREE K&N® decal *

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last 1 million miles or more. This filter can be used in a stock machine, with no modifications required. If any engine modifications have been made tuning/jetting adjustments may be required. There are special installation instructions, so please follow the procedures outlined below to ensure the K&N® Filtercharger® seals properly.

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

INSTALLATION:

1. Remove the 4 screws which secure the ECU to the air filter housing. (Fig. 1)
2. Flip the ECU over and remove the 4 air filter housing lid screws. (Fig. 2)
3. Unclip the 3 wire looms from the air filter housing lid. (Fig. 3)
4. Loosen the intake tube from the air filter housing and remove the OE air filter from the air filter housing. (Fig. 4)
5. Fit the K&N air filter into the air filter housing. (Fig. 5)
6. Refit the air filter housing lid and wire loom. (Fig. 6)

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.



Fig. 1



Fig. 2



Fig. 3



Fig. 4



Fig. 5



Fig. 6

CLEANING:

K&N Engineering, Inc., suggests checking the air filter element periodically for excessive dirt build-up. Depending on your driving conditions, we recommend cleaning your air filter every 50,000 miles. To clean and re-oil, purchase our filter Recharger® service kit, part number 99-5050 or 99-5000 and follow the easy instructions.