



SPRITE & MIDGET VERTICAL FLOW

070019

1. Disconnect the battery +VE and drain the water system.
2. Place the fan in desired position ensuring no fouling on the steering shaft. Push the mounting pins through the lugs on the fan and place the 4 rubber pads between the fan and the radiator core. Feed the mounting pins through the radiator core and push on the 4 foam pads and ratchet buttons on to each mounting pin tail protruding from the front of the radiator. Pull tight until the fan is securely mounted.
4. Follow the instructions for fitting the electronic fan controller.

Revotec Ltd | Tel: 0044 (0)1491 824424 | Fax: 0044 (0)1491 833711 | www.revotec.com



SPRITE & MIDGET VERTICAL FLOW

070019

1. Disconnect the battery +VE and drain the water system.
2. Place the fan in desired position ensuring no fouling on the steering shaft. Push the mounting pins through the lugs on the fan and place the 4 rubber pads between the fan and the radiator core. Feed the mounting pins through the radiator core and push on the 4 foam pads and ratchet buttons on to each mounting pin tail protruding from the front of the radiator. Pull tight until the fan is securely mounted.
4. Follow the instructions for fitting the electronic fan controller.

Revotec Ltd | Tel: 0044 (0)1491 824424 | Fax: 0044 (0)1491 833711 | www.revotec.com



SPRITE & MIDGET VERTICAL FLOW

070019

1. Disconnect the battery +VE and drain the water system.
2. Place the fan in desired position ensuring no fouling on the steering shaft. Push the mounting pins through the lugs on the fan and place the 4 rubber pads between the fan and the radiator core. Feed the mounting pins through the radiator core and push on the 4 foam pads and ratchet buttons on to each mounting pin tail protruding from the front of the radiator. Pull tight until the fan is securely mounted.
4. Follow the instructions for fitting the electronic fan controller.

Revotec Ltd | Tel: 0044 (0)1491 824424 | Fax: 0044 (0)1491 833711 | www.revotec.com



SPRITE & MIDGET VERTICAL FLOW

070019

1. Disconnect the battery +VE and drain the water system.
2. Place the fan in desired position ensuring no fouling on the steering shaft. Push the mounting pins through the lugs on the fan and place the 4 rubber pads between the fan and the radiator core. Feed the mounting pins through the radiator core and push on the 4 foam pads and ratchet buttons on to each mounting pin tail protruding from the front of the radiator. Pull tight until the fan is securely mounted.
4. Follow the instructions for fitting the electronic fan controller.

Revotec Ltd | Tel: 0044 (0)1491 824424 | Fax: 0044 (0)1491 833711 | www.revotec.com