


ITEM NO.	PART NUMBER	QTY.
1	FRM-02	1
2	Pair of Premium Runners	1
3	Premium Wide Handle	1
4	M8 x 16mm Button Head Bolt	4
5	M8 x 20mm Button Head Bolt	4
6	M8 Rear Slot Washer	2
7	Seatbelt Bracket (Variable Dependant on Seat Model)	1
8	Spacer Bar	1
9	Seatbelt Receiver (If Required)	1
10	7/16" x 20mm Hex Bolt	1

## FRM-02 at 405mm

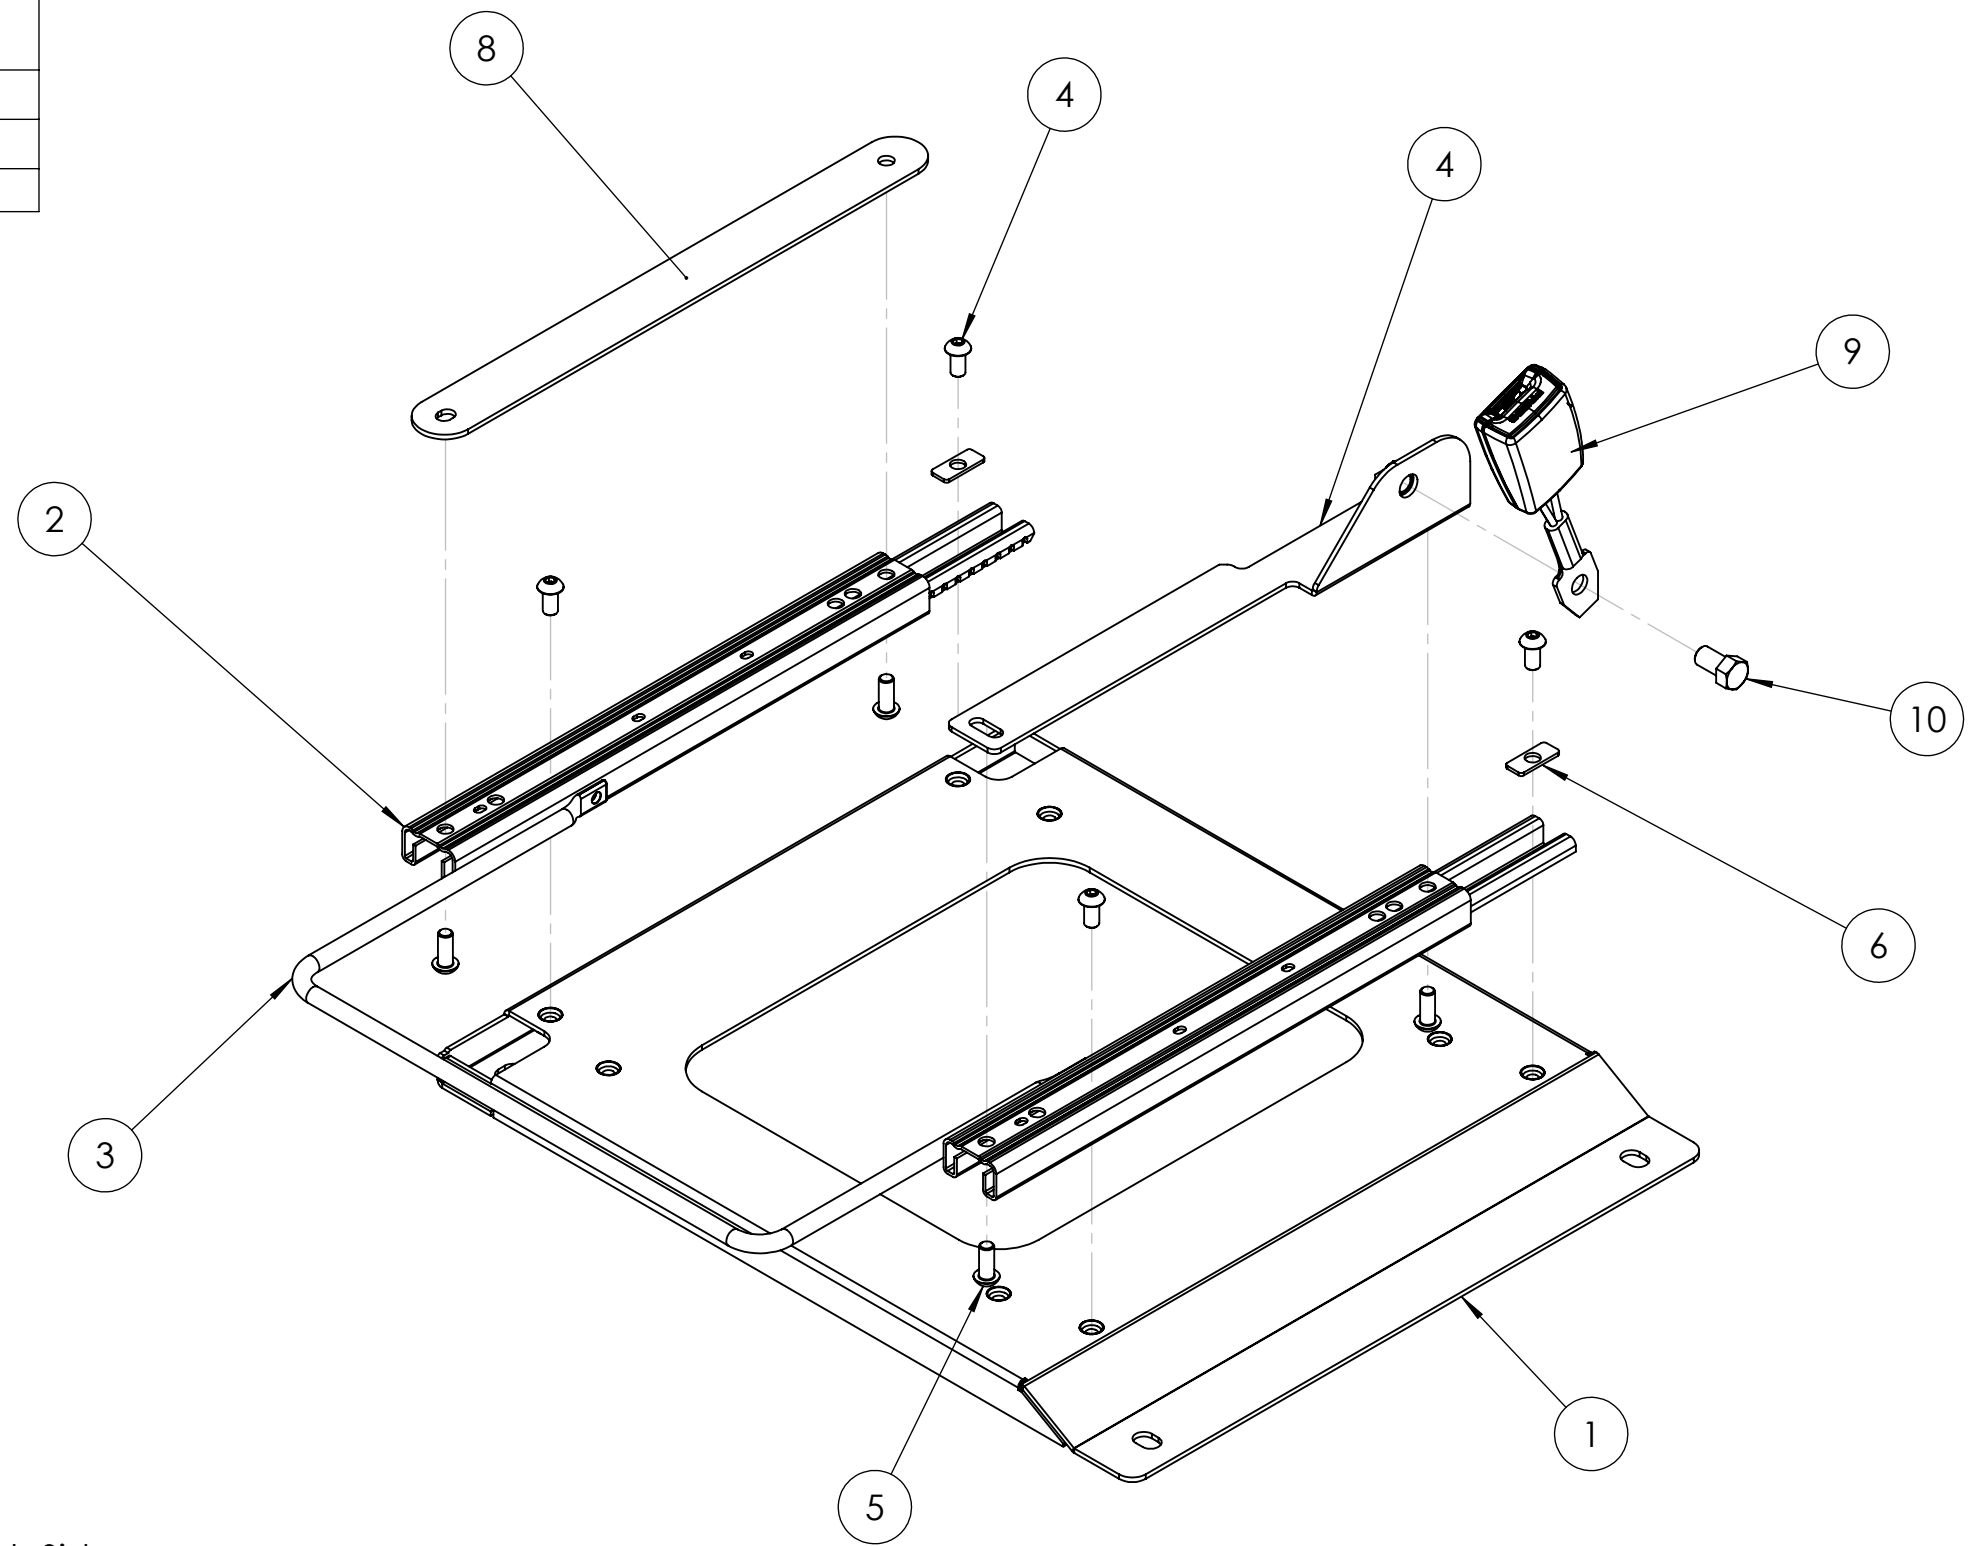

NOTE: This drawing is configured for UK Driver's Side.  
For UK Passenger Side, the Spacer Bar and the  
Seatbelt Brackets must be on opposite sides in  
relation to this drawing. Therefore, a Left-Handed  
Seatbelt Bracket will be required.