


ITEM NO.	PART NUMBER	QTY.
1	FRM-06	1
2	Pair of Premium Runners	1
3	Narrow Premium Handle	1
4	M8 x 16mm Button Head Bolt	4
5	M8 x 20mm Button Head Bolt	4
6	M8 Rear Slot Washer	2
7	Seatbelt Bracket (Variable Dependant on Seat Model)	1
8	Spacer Bar	1
9	Seatbelt Receiver (If Required)	1
10	7/16" x 20mm Hex Bolt	1

## FRM-06 at 292mm

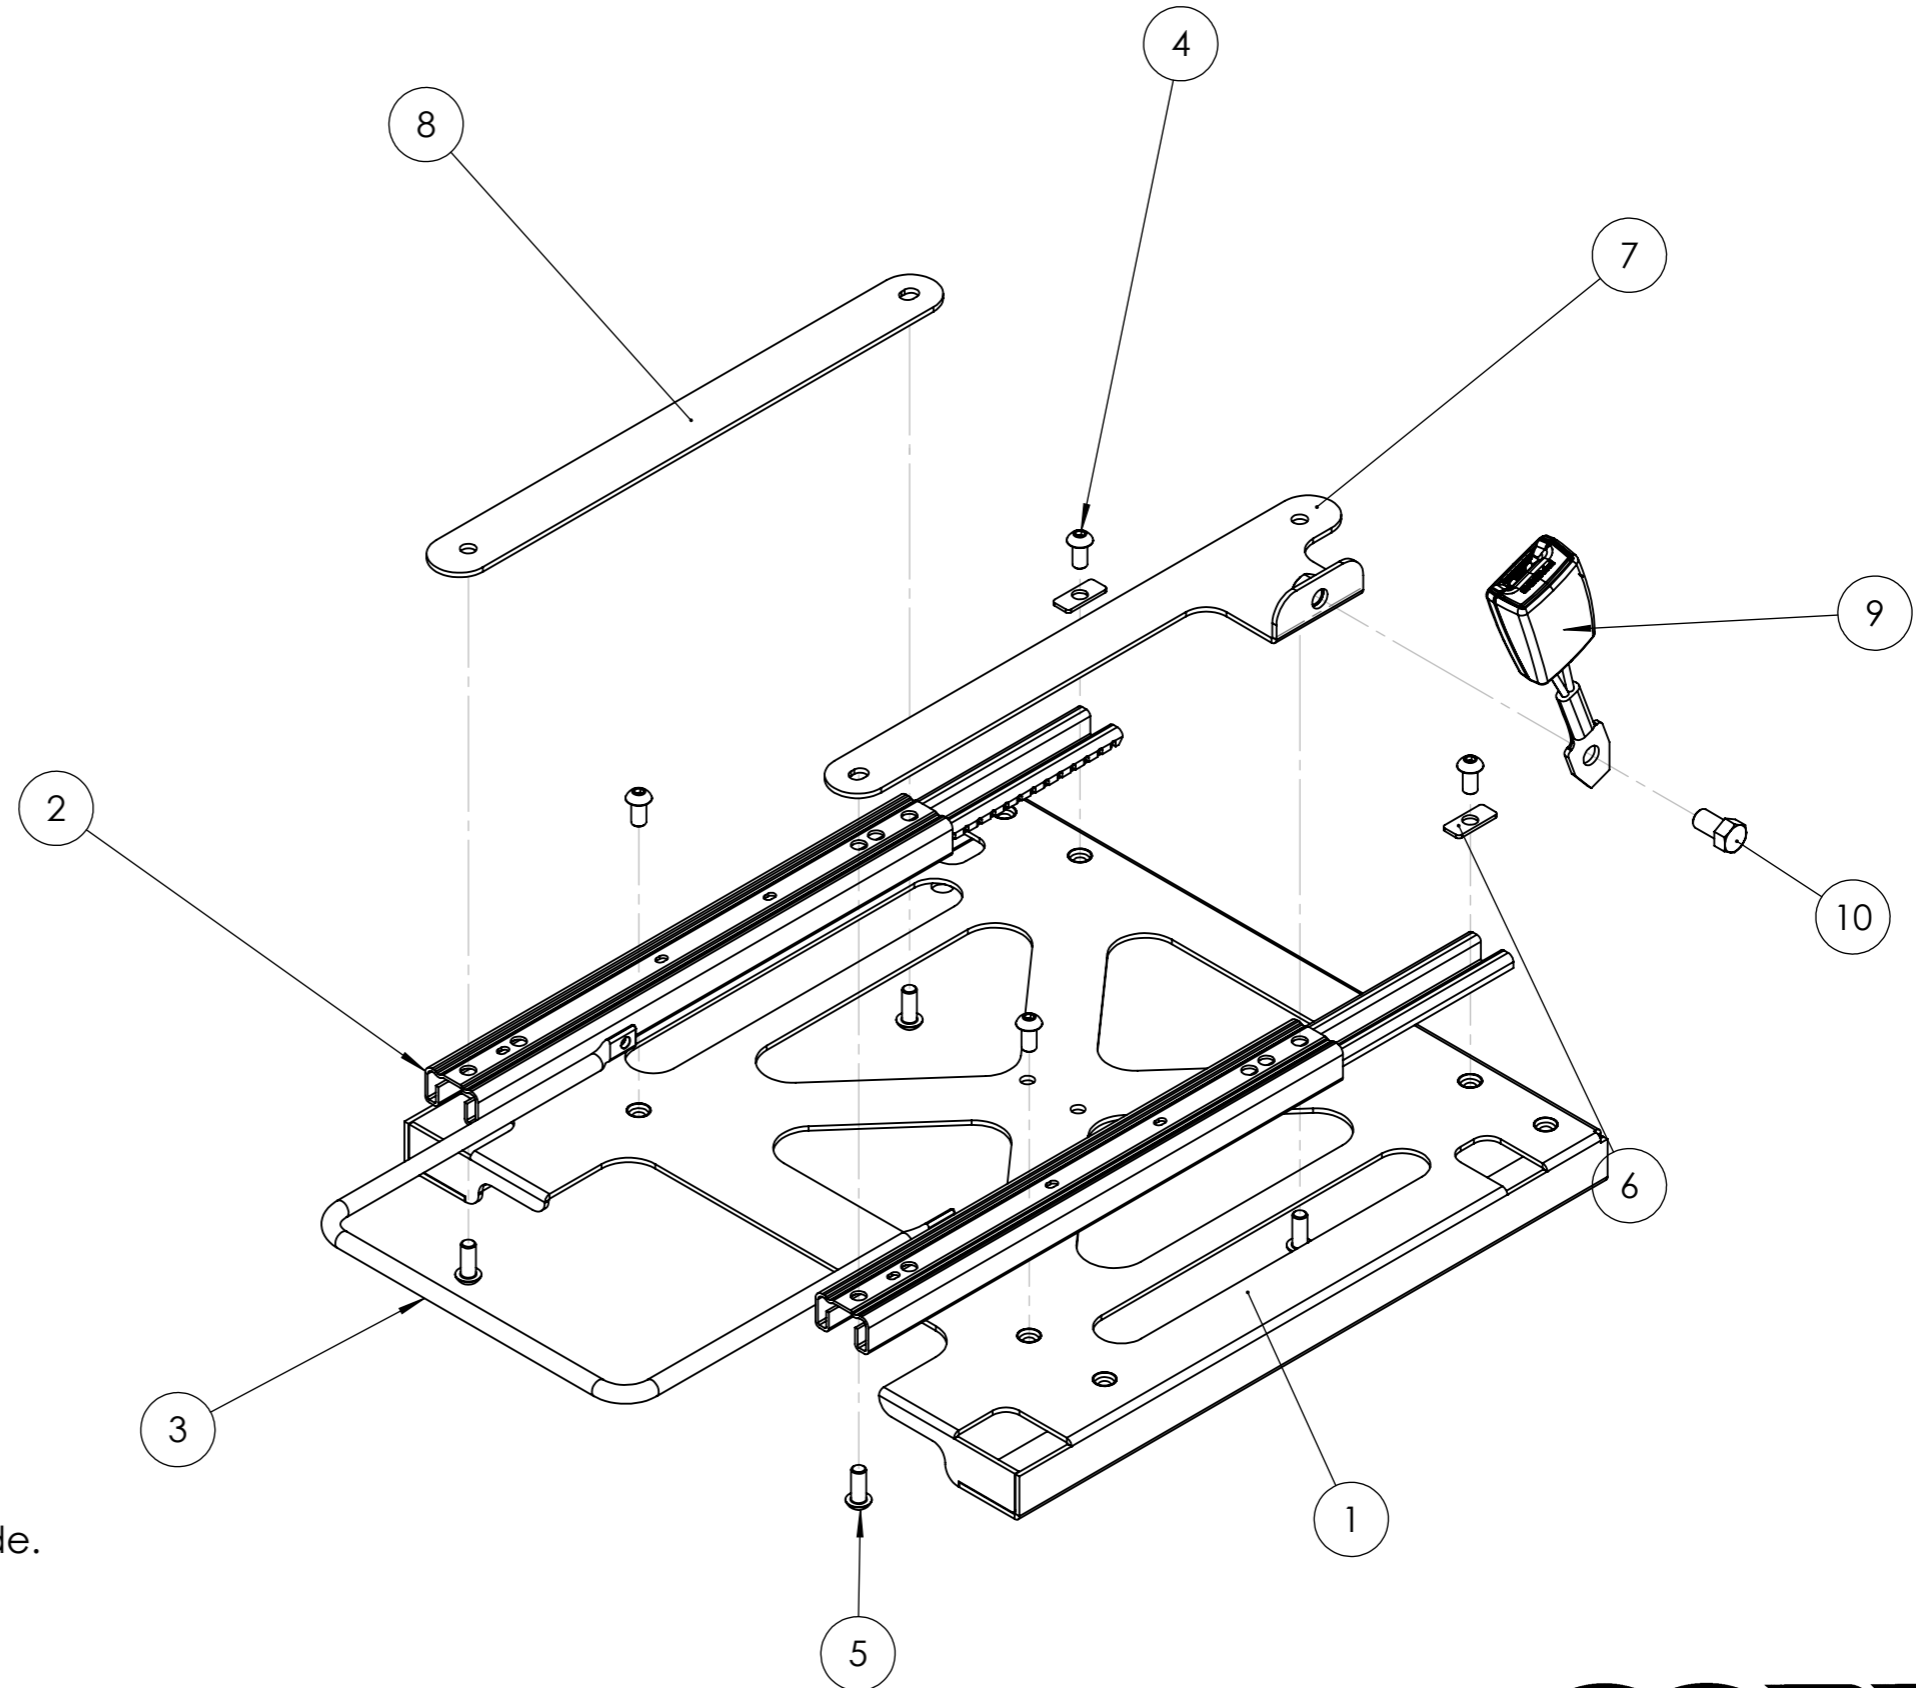

NOTE; This drawing is configured for UK Drivers side.  
For UK passenger side, the spacer bar and the seatbelt bracket must be on opposite sides in relation to this drawing. therefore, a left handed seatbelt bracket will be required.