


ITEM NO.	PART NAME	QTY.
1	FRM-13	1
2	Pair of Premium Runners	1
3	Premium Narrow Handle	1
4	M8 x 20mm Button Head Bolt	8
5	M8 Rear Slot Washer	2
6	Seatbelt Bracket	1
7	Spacer Bar	1
8	Seatbelt Receiver (If Required)	1
9	7/16" x 20mm Hex Bolt	1
10	M8 Nyloc Nut	4

FRM-13 at 292mm

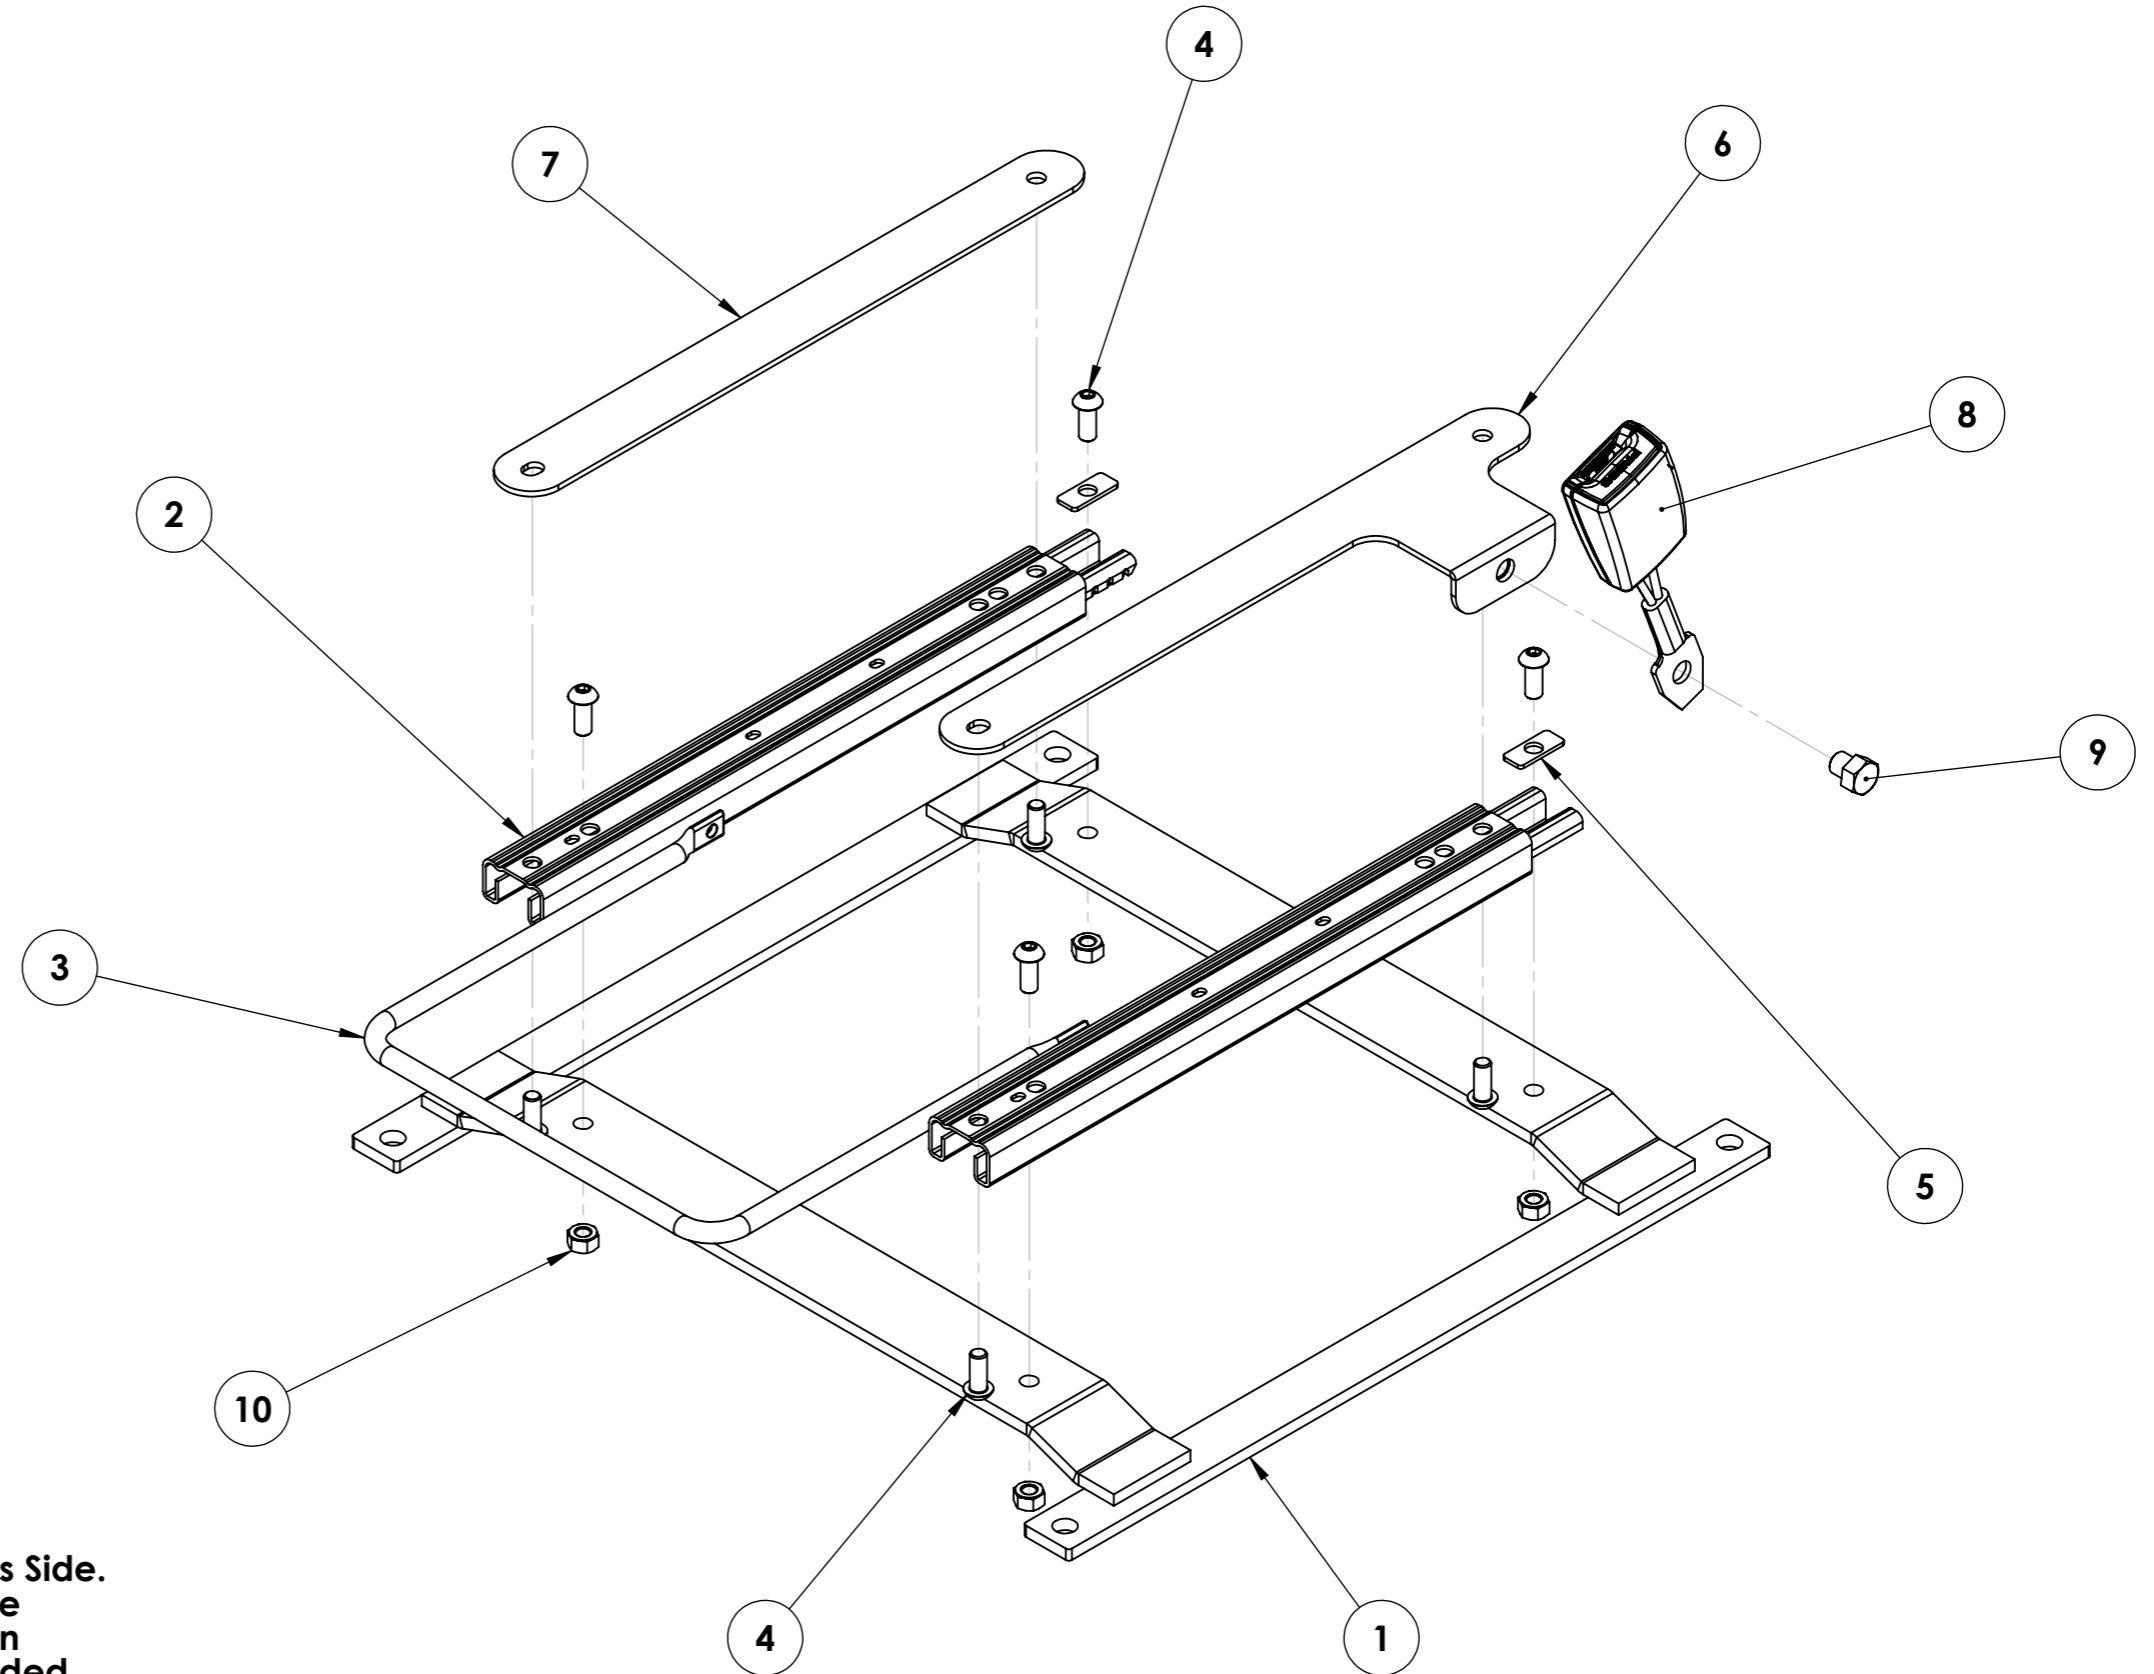

NOTE: This drawing is configured for UK Driver's Side. For UK Passenger Side, the Spacer Bar and the Seatbelt Brackets must be on opposite sides in relation to this drawing. Therefore, a Left-Handed Seatbelt Bracket will be required.