

POWERFLEX®

PART NUMBER

PFF44-202G

DESCRIPTION

FRONT ARM REAR BUSH, CASTER ADJUSTABLE

INSTALLATION GUIDE

Product description:

On-car caster adjustable bush, gives +/- 0.33 degrees of adjustment. Additional anti-lift geometry has also been added to this bush.

Contents (parts per pack):

2 x Polyurethane spherical bearing bushes
1 x Grease




Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual. It is recommended that:

- all work to be carried out by a licensed technician;*
 - all safety precautions adhered to;*
 - wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*

Fitting Instructions:

1. Remove original bush from the arm, clean any dirt and corrosion from the bore in the arm. Using file remove any sharp edges from the bore of the arm.
2. Push in the new bush into the arm from the top side. The largest offset of the bush fits on the top side of the arm. Press the bush into the arm until the largest diameter sits against the top of the arm.
3. For maximum caster adjustment, place the bore of the sleeve towards the middle of the car.
4. Re-fit the arm to the car and tension all hardware to manufacturers recommended torque settings.

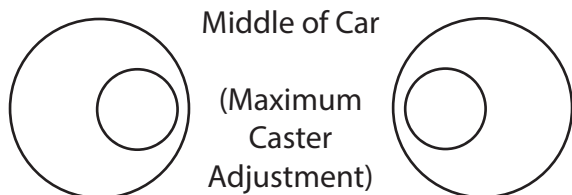

Top of Arm

