

POWERFLEX®

PART NUMBER

PFF57-1401

DESCRIPTION

Front Wishbone Front Bush

INSTALLATION GUIDE

Contents (parts per pack):

- 2 x Polyurethane Bushes
- 1 x Powerflex Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove arm from car and remove the original bush from arm.
2. Clean any dirt and corrosion from the bore in the arm. Remove any sharp edges from the bore of the arm.
3. Insert wishbone front pin into stainless steel sleeve, making sure the top of the pin is flush to the sleeve.
4. Grease inside of polyurethane bush and slide onto sleeve with the larger lip facing the lip on the arm as shown in diagrams and photos.
5. Reattach clamp and re-fit arm to the car.
6. Tension all hardware to manufacturers recommended torque settings.



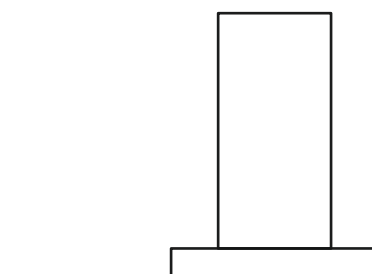


Figure 1

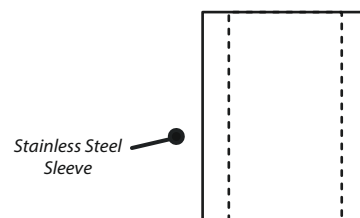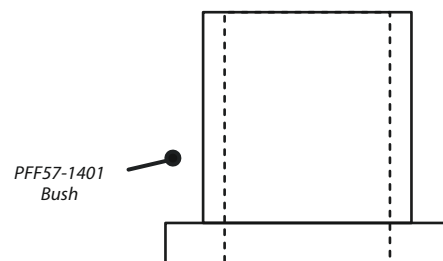