

POWERFLEX®

PART NUMBER

PFR1-608

DESCRIPTION

Rear Trailing Arm to Chassis Bush

INSTALLATION GUIDE

Contents (parts per pack):

- 4 x Polyurethane Insert Bush
- 2 x Aluminium Sleeve
- 1 x Powerflex Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:


- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tightened to manufacturer's torque settings.

Fitting Instructions:

1. Remove the original bush from the arm, but retain the outer shell. Remember to clean away any dirt and corrosion.
2. Apply some of the powerflex grease to the bushes and insert them into the place of the previous bushes.
3. Apply some of the powerflex grease to the aluminium sleeves and insert them into the polyurethane bushes.
4. Re-fit arm to the vehicle. Tighten all hardware to manufacturers recommended torque settings.



Exploded View

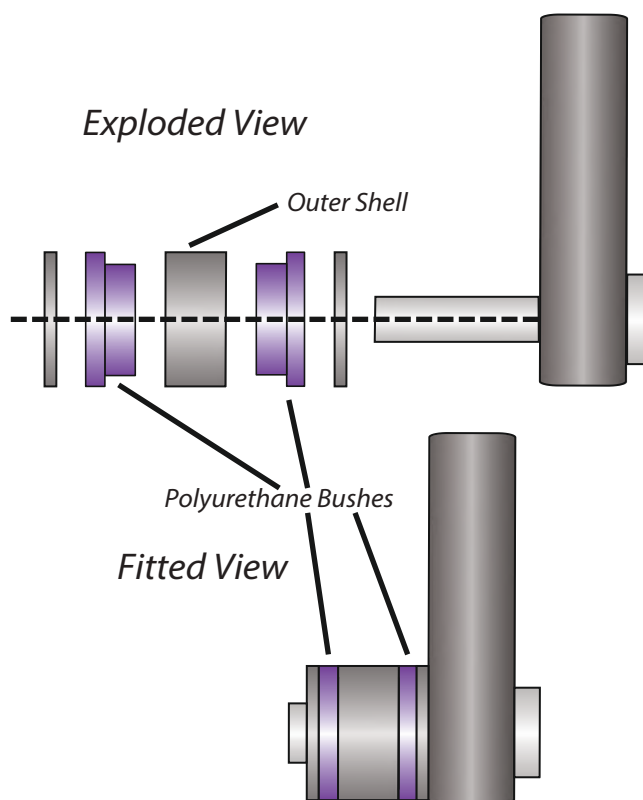

BACK OF CAR

