

POWERFLEX®

PART NUMBER

PFR19-1511

DESCRIPTION

REAR BEAM TO CHASSIS BUSH

INSTALLATION GUIDE

Contents (parts per pack):

2 x Polyurethane Bushes 1 x PTFE/Silicone Grease
2 x Stainless Steel Sleeves

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove the original rubber bush from the rear beam, make sure to retain the original mounting bracket.

2. Clean any dirt and corrosion from the bore of the arm and file off any sharp edges.

3. Push in the polyurethane bush with the larger lip diameter facing the outside of the beam, as shown in Figure 1.

4. Apply the supplied grease to the bore of the polyurethane bush and press fit the stainless steel sleeve into the bore of the bush.

5. Re-fit the rear beam to the mounting bracket and to the vehicle and tension all hardware to manufacturers recommended torque settings.

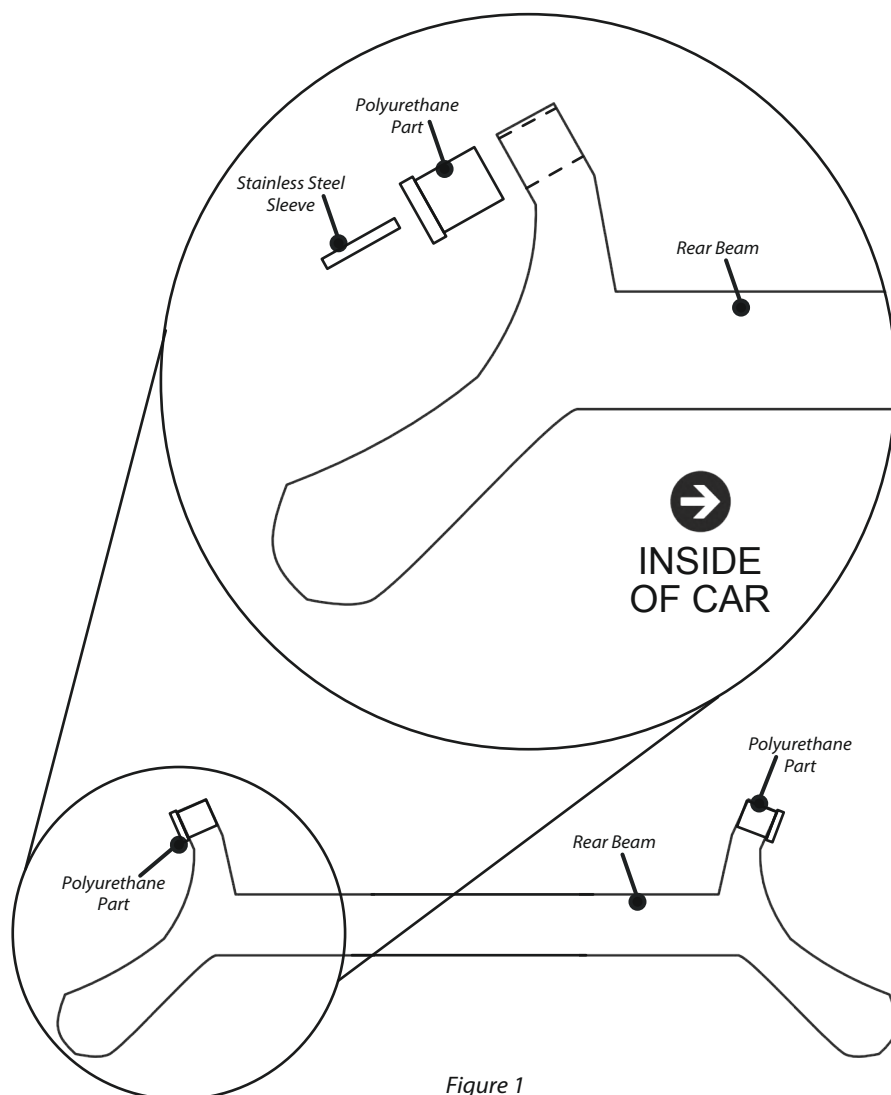


Figure 1