

Rear Bumper Protector


General Fitting instructions




0,10

Fitting temperature


18°C - 30°C

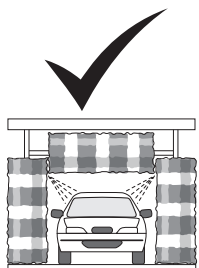

OK! (48hrs+)

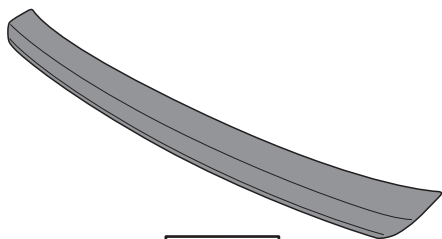


VHB™
Surface
Cleaner

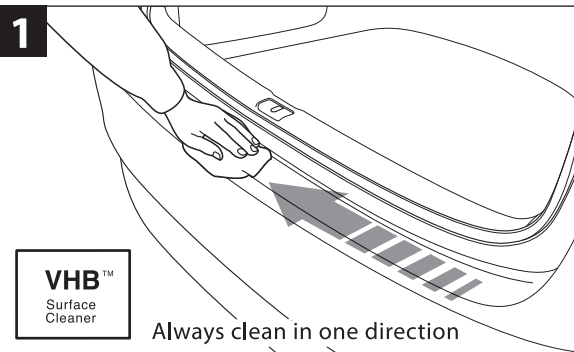


VHB™
Surface
Cleaner

Always clean in one direction

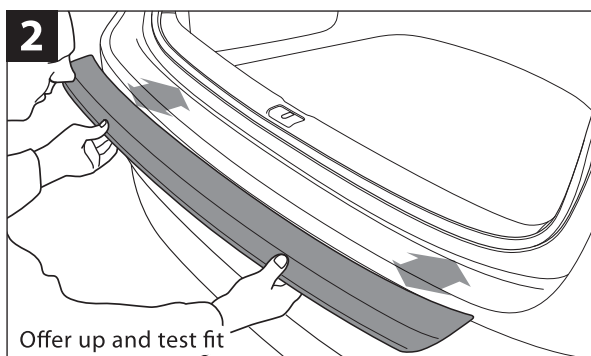


2

Offer up and test fit

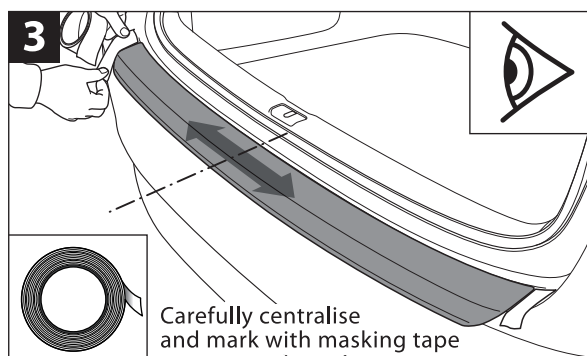


3

Carefully centralise
and mark with masking tape

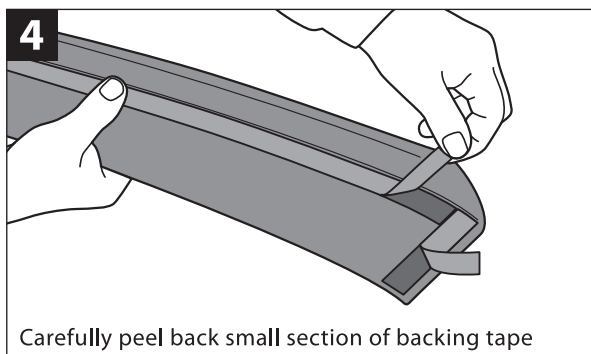


4

Carefully peel back small section of backing tape

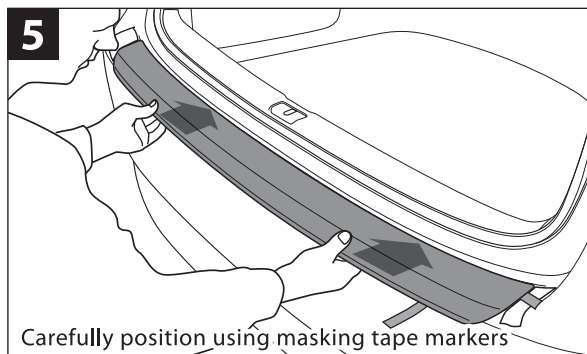


5

Carefully position using masking tape markers

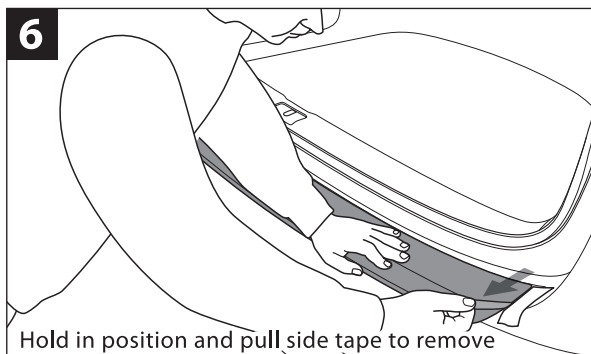


6

Hold in position and pull side tape to remove

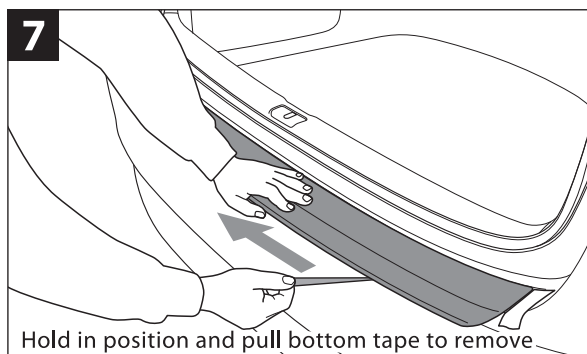


7

Hold in position and pull bottom tape to remove

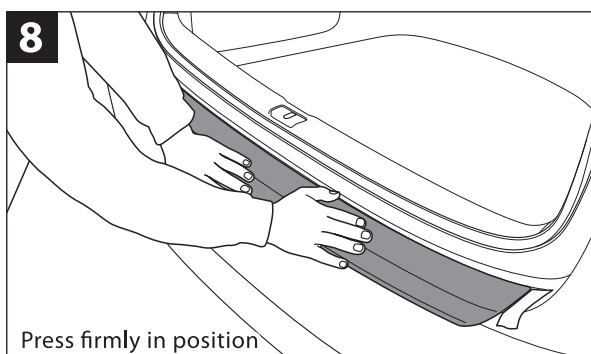

8

Press firmly in position

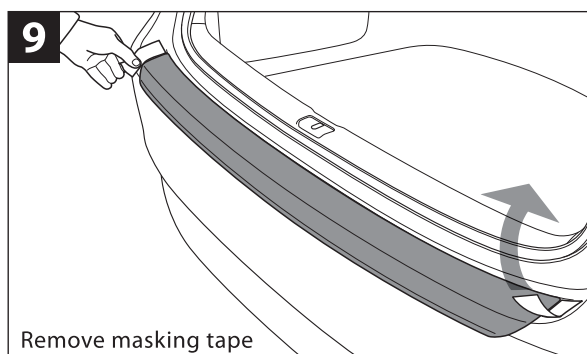

9




Remove masking tape

Rear Bumper Protector




Fitting instructions: General hints and tips






Screw fix

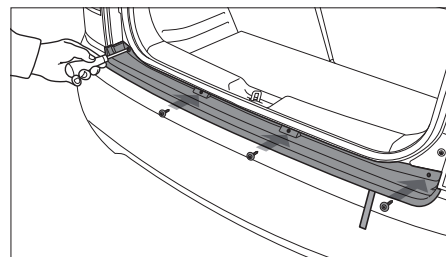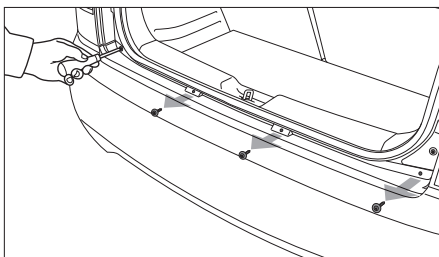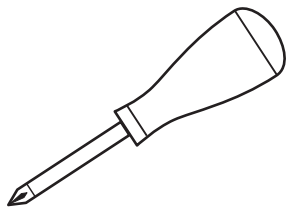




Bolt fix

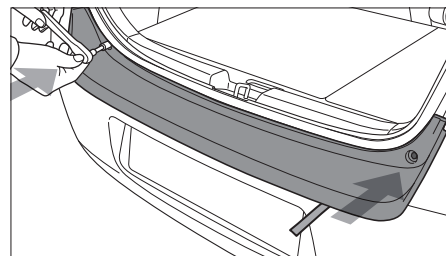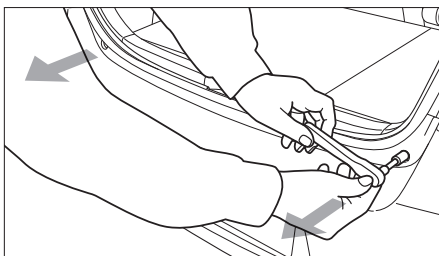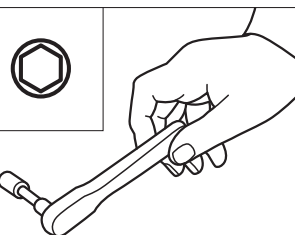







Stud fix

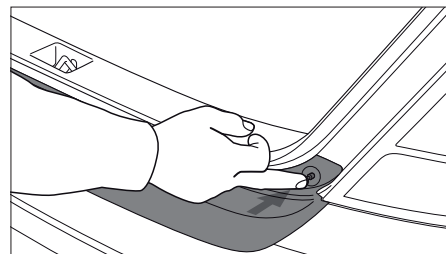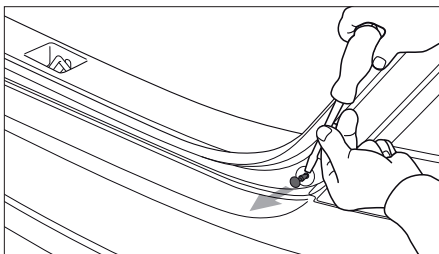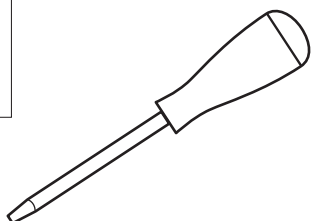


Tape

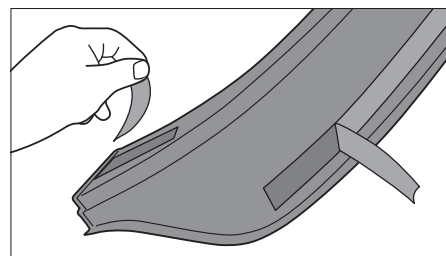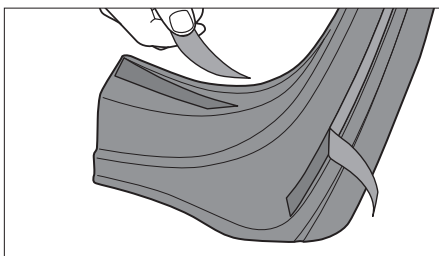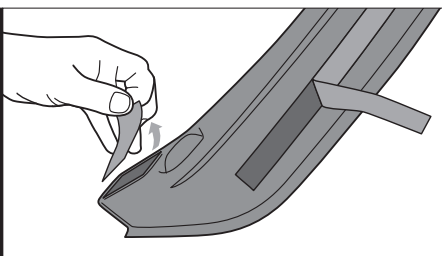

Parking sensors

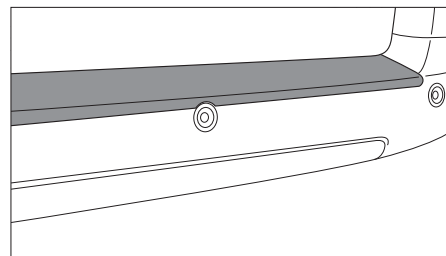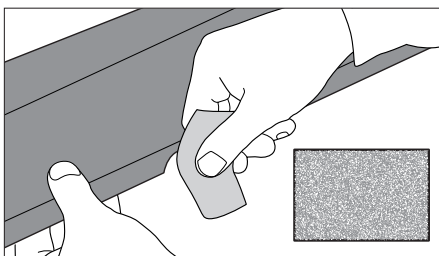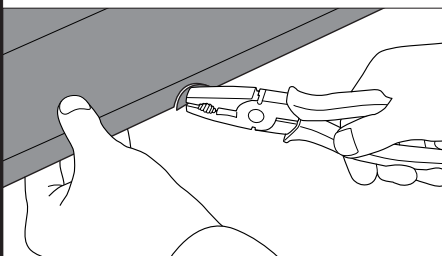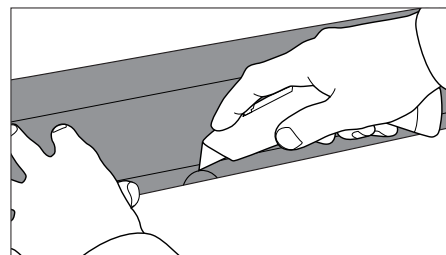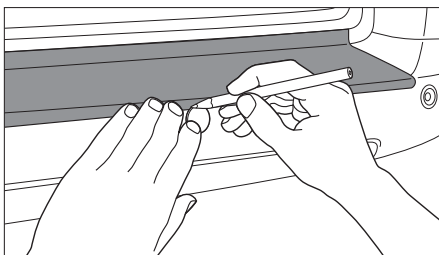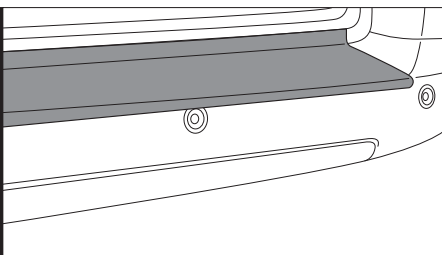

Clearance

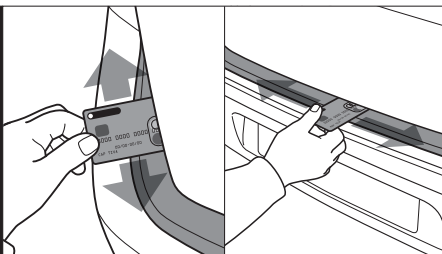

Washing

Use only water with a proprietary soap or car shampoo for cleaning your REAR BUMPER PROTECTOR. Rinse off with clean water and dry as per the remainder of the bodywork.

