




KIT CONTENTS

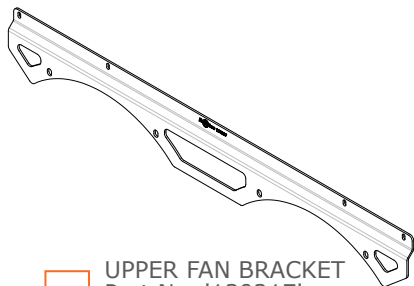


☐ UPPER FAN BRACKET
Part No. '130217'
x1

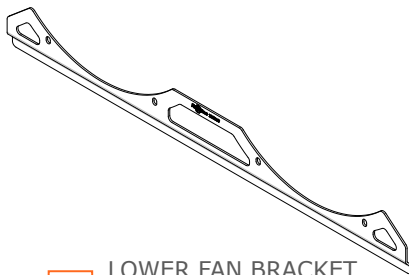


☐ LOWER FAN BRACKET
Part No. '130218'
x1

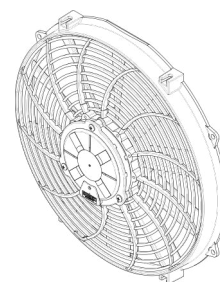

☐ 13" HP SUCTION FAN
Part No. 'FAN0429HP'
x2

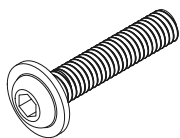

☐ M6x25 FLANGE BOLT
x8



☐ M6 WASHER
x8




☐ M6 NYLOC
x8




☐ M6 2mm SPACER KIT
x2 (x8 pcs. TOTAL)




☐ SELF-TAPPING SCREW
x4

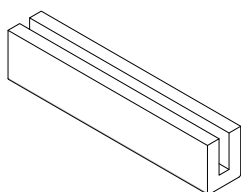

☐ RUBBER EDGING EDGE03
(50mm LENGTH) x2

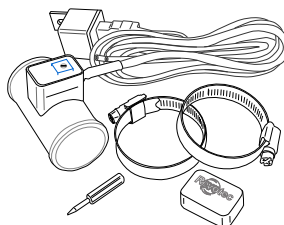

☐ ELECTRONIC FAN CONTROLLER
Part No. 'EFC35LR' x1

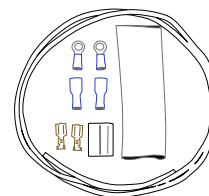

☐ TWIN FAN
EARTH KIT x1

SIGNED OFF BY: _____ DATE: _____

FUSE SIZING

To prevent damage if a cooling fan gets blocked, the circuit powering the fan needs a time-delay type fuse with the correct amperage rating.
This installation uses 2x 13" suction fans - part numbers FAN0429HP (F53-12E8103-28S).
The nominal combined running current of both (**connected in parallel**) is 18.5amps.

IMPORTANT NOTES

This Revotec cooling kit has been engineered to provide perfect cooling for your Range Rover.

However it is essential that the other components in the cooling system are operating correctly. The following must be checked:

1.The radiator has a normal life expectancy of approximately 8-9 years, after this time it should be thoroughly assessed and any signs of deterioration, such as furring up internally or distortion, a replacement is recommended.

2.The radiator fins must be clear of all debris such as mud and leaves.

3.The system must be filled with the correct coolant.

4. The water pump and thermostat must be operating correctly.

5. This kit is designed to fit original, unmodified vehicles only.

Installations are to be undertaken by a competent vehicle mechanic.


If in doubt, consult a qualified professional.

Always work in a safe environment and wear PPE where necessary.

Disconnect the vehicle battery before beginning installation.


Failure to comply with the above may result in your warranty being void.

STEP 1

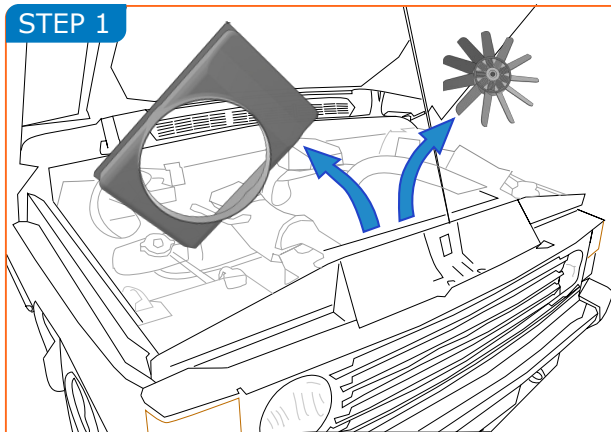


Remove the viscous fan assembly and fan shroud from behind the radiator. This cooling kit can be installed with the radiator in the vehicle.

STEP 2

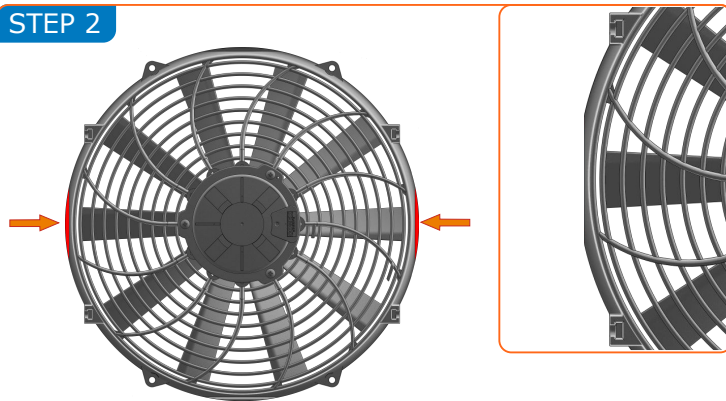

To allow fan fitting, the supplied fan edges feature a removable edge that needs trimming. With the fan cable entry point facing left or right, use a pair of side cutters (or similar) to trim the two side edges back to the straight edge (shown above).

STEP 3

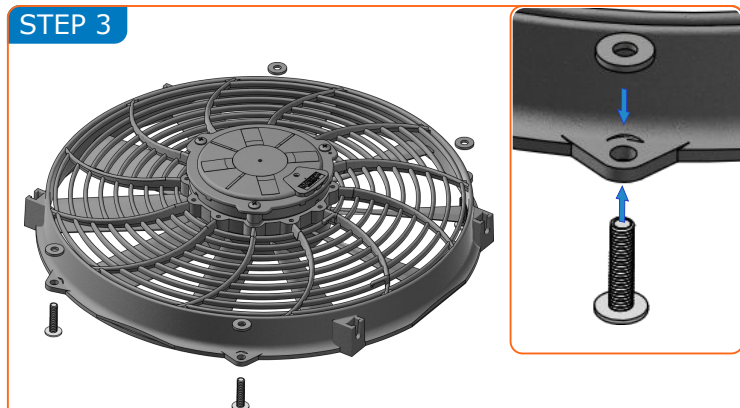


With the supplied fans facing upward, insert the M6 flanged head screws through the fan fixing tabs from the underside (4x per fan). Lay the fans down on a clean flat surface, then position one of the supplied spacers over each protruding M6 thread.

STEP 4




Rotate the fans to ensure the cable entry points are facing each other (shown in red above). Position the upper and lower brackets over the protruding studs. Please note, the bracket folds face downward.

STEP 5

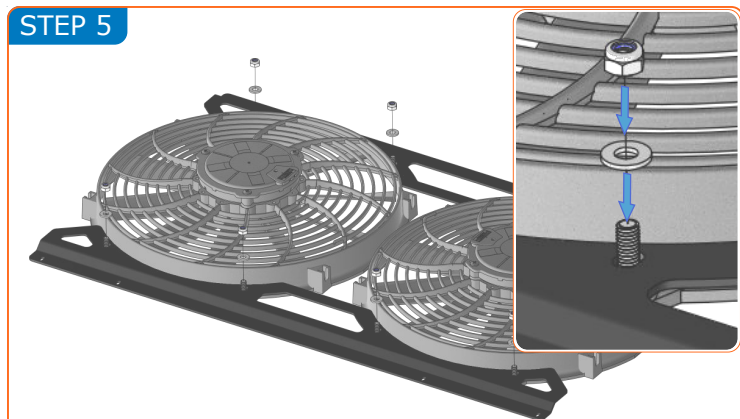


With the brackets positioned correctly, add an M6 washer and M6 nyloc nut to each screw thread. Using a 4mm allen key and 10mm socket, tighten the fixings, taking care not to over-tighten.

STEP 6

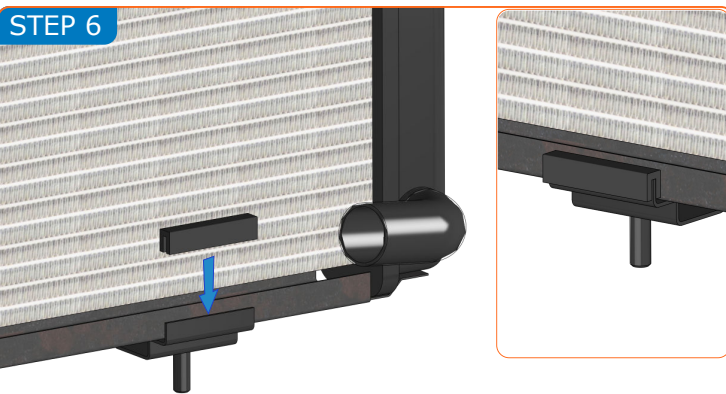


To ensure the fan assembly fits securely within the radiator lower channels, the supplied rubber edging strips may be required. Slide one of the rubber edging strips over each of the protruding radiator channels.

STEP 7

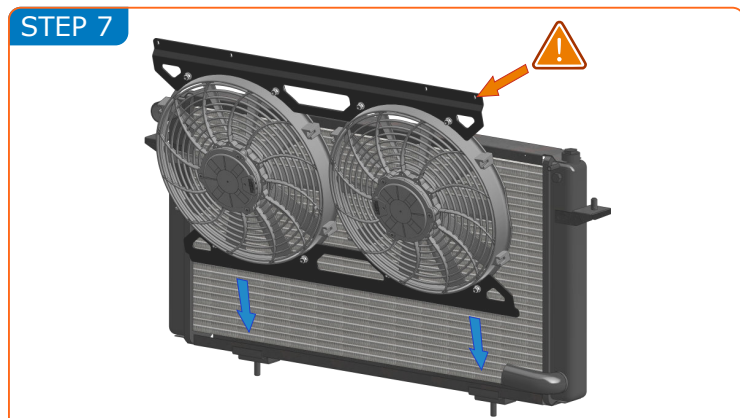

Lower the bottom bracket into the radiator metal channels. Some minor manipulation may be required to ensure the bracket sits flush with the bottom of the radiator securely. Note the bracket hole positions top right of the assembly.

STEP 8

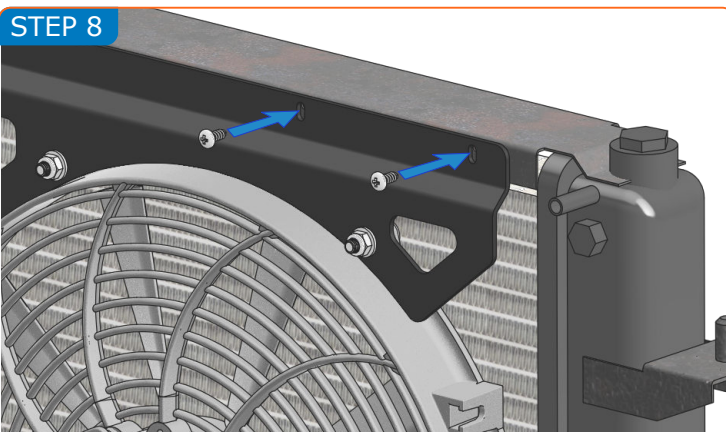

Using the supplied self-tapping screws, secure the assembly to the top edge of the radiator (4x positions). Ensure fans are free-spinning and that the assembly is not twisted. Ensure there is a uniform gap around the fan blades. Refer to the Revotec Fan Controller and Twin Earth Kit instructions for next steps.