

### VERY IMPORTANT NOTE

This Revotec Cooling Kit has been engineered to provide perfect cooling for your Spitfire. However it is essential the other components of the cooling system are operating correctly.

The following must be checked:

1. The Radiator has a normal life expectancy of approx 8-9 Years after this time It should be thoroughly assessed and any signs of deterioration such as furring up internally or out of shape it is recommended it is replaced.
2. The Radiator fins Must be clear of all debris such as mud and leaves.
3. The system Must be filled with Correct Coolant.
4. The Water Pump and thermostat must be operating correctly.

Disconnect the battery terminal.

1. Drain the water system and remove the top and bottom hose

2. Remove the 4 outer radiator mounting bolts.

3. Assemble the bracket fan and shrouds together in the order shown in Fig.1 with the brackets curving towards the rear of the fan, as shown in Fig.2. Full assembly shown in Fig.3

4. Mount the fan and bracket assembly between the radiator mounts on the car and radiator, on the front side of the radiator. The plastic shrouds should fit flush to the core and snugly between the top and bottom radiator end tanks, use the original radiator mounting bolts to mount everything in place.

6. Mount the Electronic Fan Controller in the bottom hose and follow the EFC instructions for information on set-up.

Fig.1



Fig.2



Fig.4

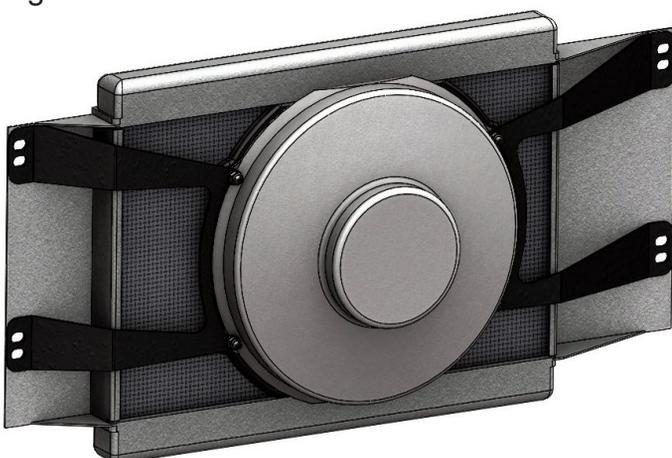


Fig.3

