

LAND ROVER SERIES 3 V8 COOLING KIT

Disconnect the battery terminal.

- **1.** Drain the water system and remove the top hose from the radiator.
- 2. Remove the original shroud and fan.
- **3.** Assemble the 2 fans onto the 2 brackets as shown in Fig.1 and Fig.2.
- **4.** Slide the fan and bracket assembly in place where the original shroud was mounted and mount the top bracket with the included shoulder bolts and spring washers Fig.3 and Fig.4.
- **5.** Follow Electronic Fan Controller instructions for information on set-up. see Fig.5 for wiring the 2 fans to the controller.

Fig.4

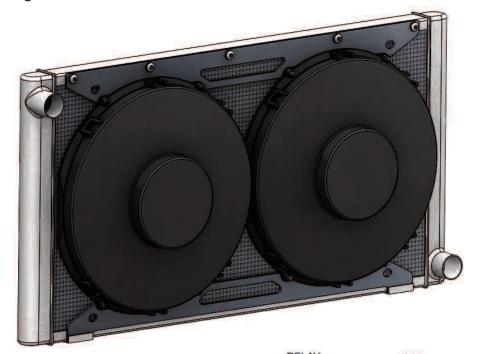




Fig.2



Fig.3



