


SCORPION // FITTING INSTRUCTIONS

HAND BUILT

Car	BMW M140i Non GPF	Part No.	SBMS076C			
Year	2016-2018	Fit Kits	271FK			
Notes	Where not supplied use original fittings. Valve requires O.E motor, See instructions on following page.	Features	Pipe Diameter:- 80mm			
Estimated Fitting Time: 2 Hours 20 Minutes						

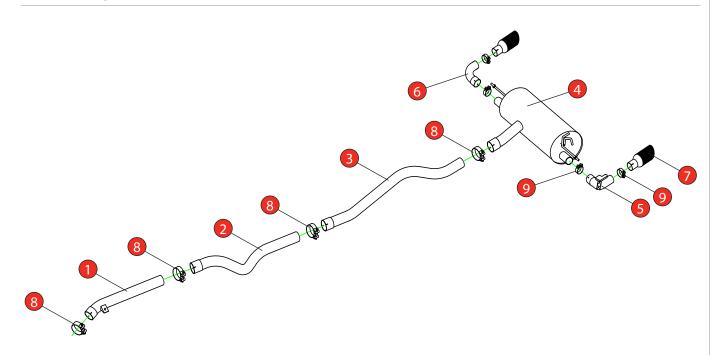

NO.	PART NO.	DESCRIPTION	QTY	E-MARK	N/A
1	727BM	Front Pipe	1	DATE	27/11/20
2	728BM		-	ISSUE	01
2	728BIVI	Centre Pipe	1	AUTHORISED	M.Ydlibi
3	729BM	Link Pipe	1		
4	730BM	Rear Silencer	1		
5	750BM	L/H Trim Connecting Pipe With Valve	1		
6	751BM	R/H Trim Connecting Pipe	1		
7	Z023.10055	Black Ceramic Coated Daytona Trim	2		
Fit Ki	Fit Kit				
8	Z016.10069	79 - 85mm H/D Clamp	4		
9	Z016.10064	63 - 68mm H/D Clamp	4		

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.



Ы



SCORPION // FITTING INSTRUCTIONS



Car	BMW M140i Non GPF	Part No.	SBMS076C			
Year	2016-2018	Fit Kits	271FK			
Notes	Where not supplied use original fittings	Features	Pipe Diameter:- 80mm			
Estimated Fitting Time: 2 Hours 20 Minuets						









A) Remove the electronic actuator from the original exhaust.

B) On the scorpion product fit the fixing bow into the valve and use the actuator to secure the bow in place.

C) Use the M6 bolts and washers to fasten the actuator to the valve ensuring the two straights on the fixing bow fit between the grooves on both of the posts.

