
FITTING INSTRUCTIONS

			FITTING INSTRUCTIONS
CAR	Ford Focus ST 2.0T 250	PART NO.	SFDS071CF
YEAR	12-19	FIT KITS	058 FK
NOTES	Where not supplied use original fittings	FEATURES	Pipe diameter:- 76mm/3"

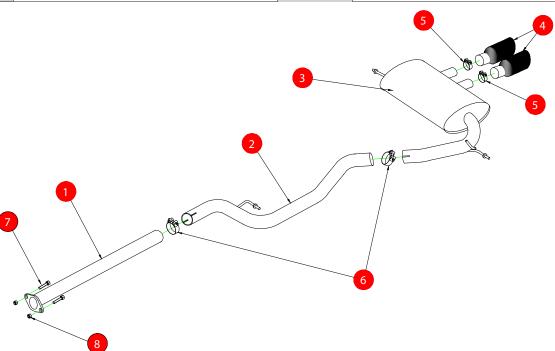

NO.	PART NO.	DESCRIPTION	QTY	E-MARK	N/A
1	1170FD	Centre No Silencer	1	DATE	12/08/20
2	1172FD	Link Pipe	1	ISSUE	00
	1173FD	Rear Silencer	1	AUTHORISED	M.YDLIBI
3			1		
4	Z023.10159	Carbon Fibre Ascari Trims	2		
Fit Kit					
5	Z016.10064	65mm H/D Clamp	2		
6	Z016.10062	79mm H/D Clamp	2		
7	Z017.10096	M10 x 40 Hex head bolt	2		
8	Z017.10103	M 10 nyloc nut	2		

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.



THE LEFT HAND SIDE REAR HANGER FOR THE REAR SILENCER NEEDS TO BE TAKEN OFF AND ROTATED 180° AND RE-FITTED AS SHOWN IN THE FITTING PICTURE. THEN YOU CAN START TO ASSEMBLE THE SCORPION SYSTEM.

SCORPION RED POWER

Checked By

•