


<b>Car</b>	Hyundai i30 N Fastback GPF Model	<b>Part No.</b>	SHYS103C
<b>Year</b>	2019 - Current	<b>Fit Kits</b>	327FK
<b>Notes</b>	Where not supplied use original fittings.	<b>Features</b>	Pipe Diameter:- 76.2mm


Estimated Fitting Time: 60 Minutes

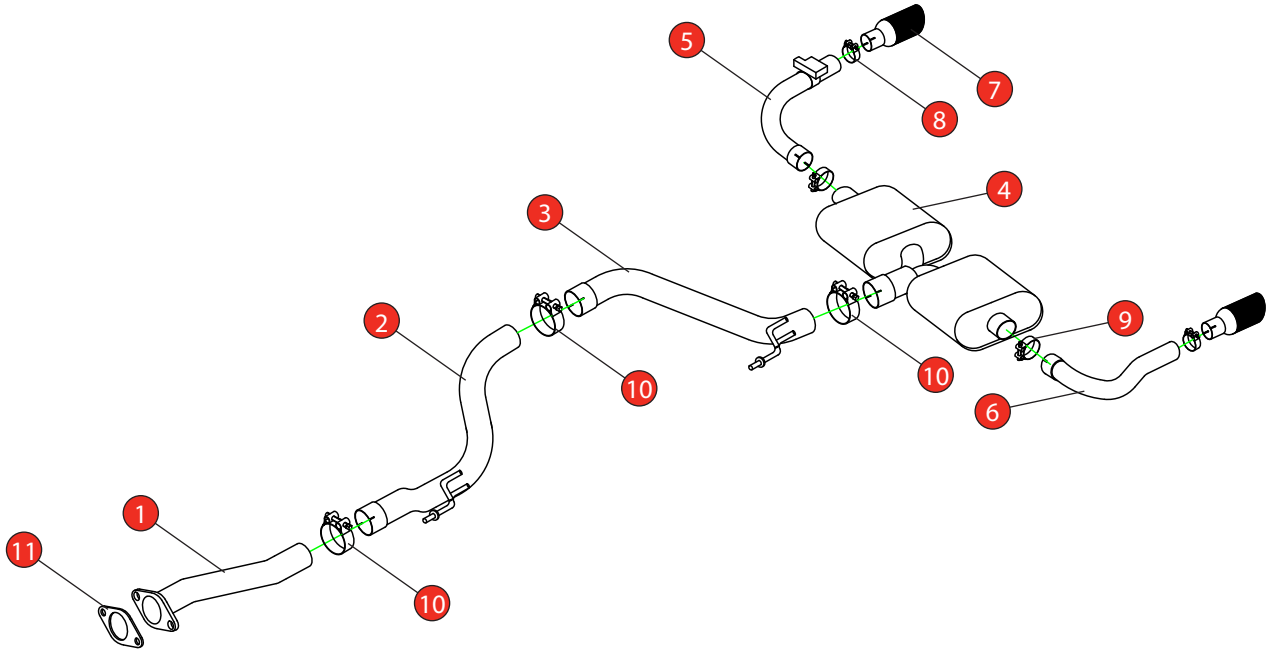

NO.	PART NO.	DESCRIPTION	QTY
1	007HY	Front Pipe	1
2	002HY	Centre Pipe	1
3	003HY	Link Pipe	1
4	008HY	Rear Silencer	1
5	013HY	RH Trim Connecting Pipe with Valve	1
6	014HY	LH Trim Connecting Pipe	1
7	Z023.10153	114mm Black Ceramic Coated Daytona Trim	2
<b>Fit Kit</b>			
8	Z016.10064	63-68mm H/D Clamp	2
9	Z016.10070	65mm Heavy Duty Clamp	2
10	Z016.10062	79mm Heavy Duty Clamp	3
11	Z033.10062	Gasket	1


E-MARK	N/A
DATE	24/09/20
ISSUE	01
AUTHORISED	M.YDLIBI

**NOTE:** ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

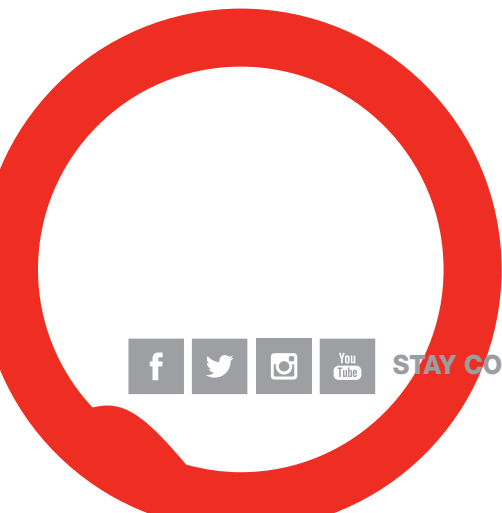


STAY CONNECTED TO RED POWER.

Car	Hyundai i30 N Fastback GPF Model	Part No.	SHYS103C
Year	2019-Current	Fit Kits	327FK
Notes	Where not supplied use original fittings.	Features	Pipe Diameter:- 76.2mm

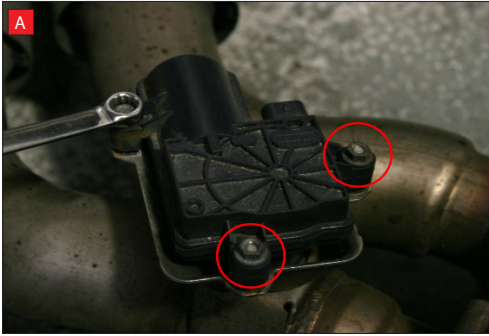

A) After you have removed O.E exhaust you will need to swap the valve motor to the Scorpion exhaust. Remove the 3 nuts (keep them safe, as you will need them to bolt the electronic valve motor to your Scorpion Exhaust).

B) Lift up the motor. You will now be able to see the torsion spring (This must stay on the electronic valve motor to work with Scorpion Exhaust).

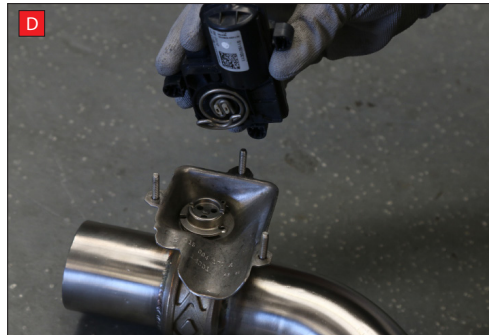

C) Rotate Scorpion valve so it aligns with the torsion spring.


D) Now fit the O.E electronic valve motor ensuring the spring seats correctly to the lugs of the valve.

E) Using the 3 O.E nuts secure in place.



Once happy with fitment of Scorpion Exhaust, fully tighten up all clamps and fixing and plug in the electronic valve motors.

**NOTE:** ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

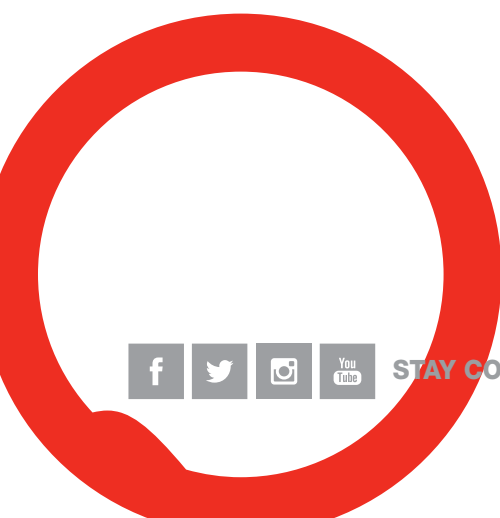

STAY CONNECTED TO RED POWER.