


SCORPION // FITTING INSTRUCTIONS

HAND BUILT

Car	Volkswagen Scirocco R 2.0 TSi	Part No.	SVW041
Year	2009-2017	Fit Kits	093FK
Notes	Where not supplied use original fittings	Features	Pipe Diameter:- 76mm

Estimated Fitting Time: 60 Minutes

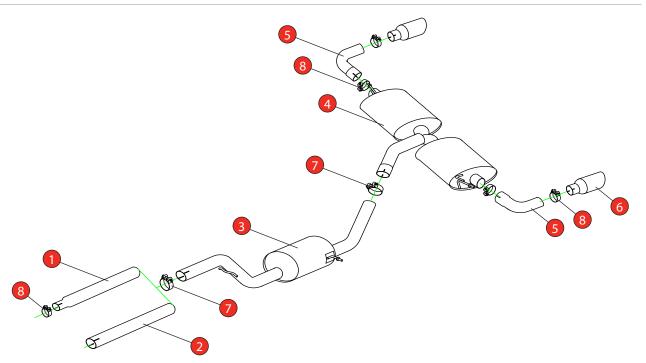

NO.	PART NO.	DESCRIPTION	QTY	E-MARK	N/A	
1	619VW	Link Pipe (to fit to original front section)	1	DATE	23/10/19	
2	586VW	Link Pipe (to fit to Scorpion front section)	1	ISSUE	04	
			1	AUTHORISED	M.Ydlibi	
3	588VW	Resonated Centre Section	1			
4	747VW	Rear Silencer	1			
5	691BM	Trim Connecting Pipe	2			
6	Z023.10061	Ø100mm Polished Daytona Trim	2			
Fit Ki	Fit Kit					
7	Z016.10062	79.2mm H/D Clamp	2			
8	Z016.10064	63-68mm H/D Clamp	5			
9	Z016.10057	Hanging Rubber	1			

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY. Before removing the original exhaust you need to disconnect the pneumatic valve hose. We recommend you use a small bolt or similar item to plug the hose and to fasten it out of sight.



STAY CONNECTED TO RED POWER.

You Tube

Ы