

#### **SCORPION // FITTING INSTRUCTIONS**

### HAND BUILT

Car	VW Golf Mk7 / 7.5 GTi & Clubsport & Clubsport S / Seat Leon Cupra 280 & 290 & 300 / Seat Leon Cupra ST 280 & 290	Part No.	SVWC043			
Year	2013-Current / 2014-Current / 2015-Current	Fit Kits	153FK			
Notes	Where not supplied use original fittings	Features	Pipe Diameter:- 76mm			
Estimated Fitting Time: 90 Minutes						

# 

NO.	PART NO.	DESCRIPTION	QTY	E-MARK	N/A
1	692VW	De-cat Turbo Downpipe	1	DATE	27/11/18
2	562AU	Mounting Bracket	1	ISSUE	06
				AUTHORISED	M.Ydlibi
Fit Ki	t				
3	Z016.10062	79mm H/D Clamp	1		
4	Z017.10808	M8 x 16mm Cap Head Bolts	2		
5	Z016.10064	63-68mm H/D Clamp (USE TO FIT TO O.E SYSTEM	1		
6	AD69	Adaptor (USE TO FIT TO O.E SYSTEM)	1		

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.








### **SCORPION** // FITTING INSTRUCTIONS

## HAND BUILT

Car	VW Golf Mk7 / 7.5 GTi & Clubsport & Clubsport S / Seat Leon Cupra 280 & 290 & 300 / Seat Leon Cupra ST 280 & 290	Part No.	SVWC043
Year	2013-2015 / 2014-Current / 2015-Current	Fit Kits	153FK
Notes	Where not supplied use original fittings	Features	Pipe Diameter:- 76mm

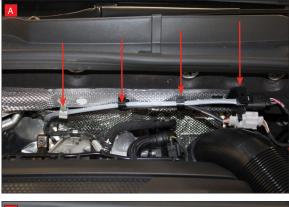









STAY CONNECTED TO RED POWER.



Feed cable this side.

PLEASE NOTE: The instructions below are only required when fitting this product to a Seat Leon Cupra.

A) Remove Lambda Probe from OE catalyst, then remove cable from clips indicated. (x4)

B) Feed Lambda cable down the right hand side (as you look at the engine)

C) Ensure Lambda cable misses the gear cables, pass to the right hand side (as you look at engine)

D) Take Lambda cable under the engine.Fit probe into Sensor boss and tighten.