

Audi Q7 S-Line & SQ7 Lower Grille Fitting Instructions

Kit Contents: -

1. off Lower Grille
2. off No6 x ¾" Screws




SCAN ME

YouTube Tutorial: <https://www.youtube.com/watch?v=d9s3yNS3t5w>

Lower Mesh Grille Fitting Instructions:

1. Fit masking tape around the edges of the apertures to protect the paintwork while fitting.
2. Carefully guide the grille into the aperture making sure the grille is centralised in the aperture and engage clips behind aperture (fig 1).
3. Using the screws provided, screw the grille into the plastic moulding to secure the grille into place. (Do not over tighten) (fig 3).
4. Remove the tape and the grilles are now complete (fig 4).

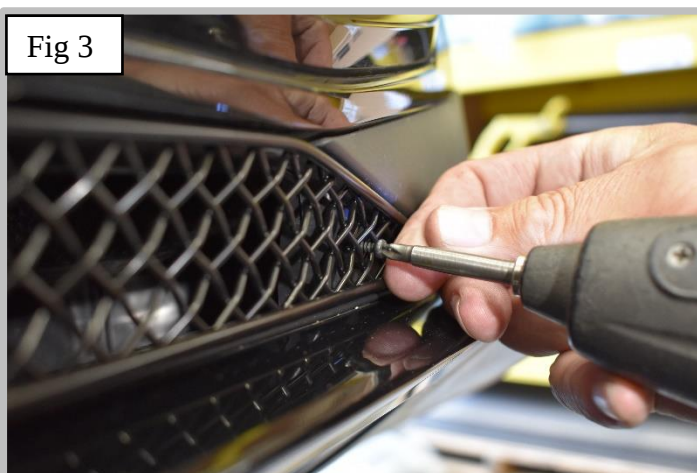

THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.