

BMW G8X Fender Liner Stainless-Steel Grille Fitting Instructions

Kit Contents: -

- 1. off L/H side Fender Grille
- 1. off R/H side Fender Grille
- 8. off M3 Nuts
- 8. off M3 Washers
- 8. off M3 Cap Screws






Oil Cooler Grille Fitting Instructions:

**Please note: we advise for ease of fitment, to put the vehicle on a ramp or axle stands.*

1. Remove the front wheel to have access to the fender grille (fig 1).
2. Remove the 5 existing bolts and remove the fender liner piece from the car (fig 2 & 3).
3. With the fender liner piece removed, then use snips to cut out the OEM plastic slats for the fender grille (fig 4), cut it all out until fully removed.
4. You can sand the remaining sharp edges for a safer and cleaner look (fig 5).
5. With the plastic trim removed, place the fender grille part over the fender and align to ensure correct fitment (fig 6).
6. When fitting the grille, ensure the tabs are placed over the grille (fig 7).
7. When grille is placed correctly, then mark up and create pilot holes for the screws to go into. Using the screws provided, secure the grille to the aperture (DO NOT OVERTIGHTEN (fig 8).
8. Replace the fender liner to the car and secure the 5 bolts (fig 9).
9. Grille fitment now complete (fig 10).



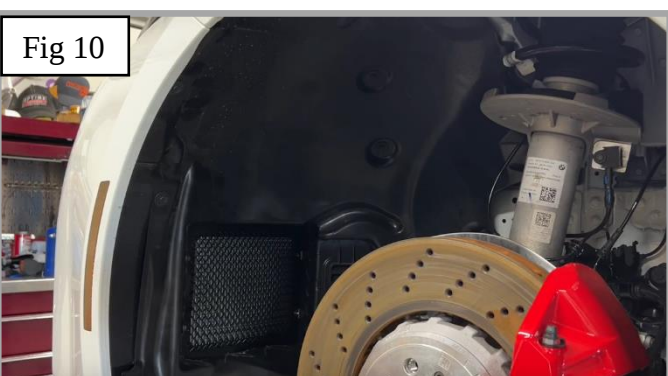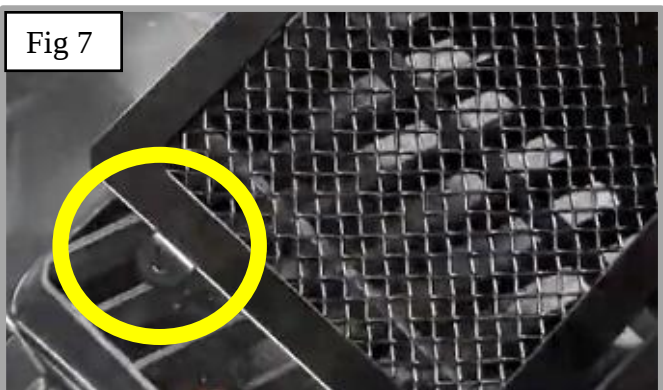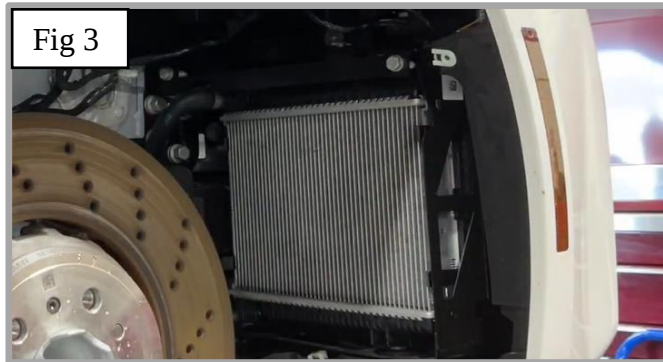

THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.