

BMW G8X Vorsteiner Grille Inserts

Fitting Instructions

Kit Contents: -

- 1. off Upper L/H side Grille
- 1. off Upper R/H side Grille
- 1. off Lower L/H side Grille
- 1. off Lower R/H side Grille



Vorsteiner Grille Inserts Fitting Instructions:

If you are installing this grille in replacement of the OEM, remove OEM grille first ready to it the Vorsteiner and fit masking tape around the aperture.

If you already have the Vorsteiner grille. remove the grille and fit masking tape around the open aperture.

1. With the grille off the car, place the grilles over and align to ensure correct fitment (fig 1).
2. When fitting the grille, ensure the tabs are placed over the grille (fig 2).
3. When grille is placed correctly, then use strong mastic to the tabs to secure the grilles to the aperture (fig 3).
4. Grille is now ready to reinstall to the car (fig 4).

Fig 1




Fig 2



Fig 3



Fig 4

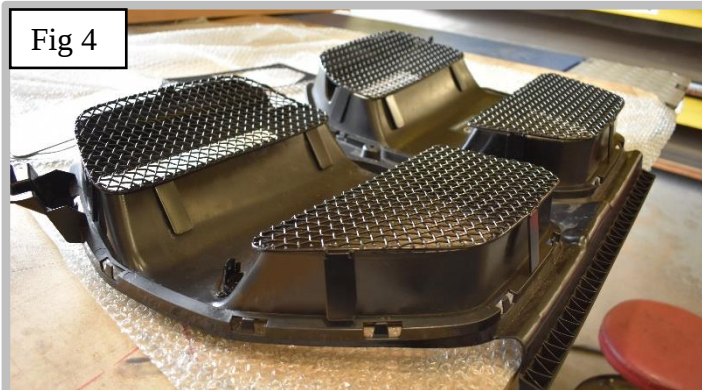

THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.