

BMW BMW G20 M340i Pre-LCI **Centre Stainless Steel Sports Grille** **Set FITTING INSTRUCTIONS**

Inner Outer Mesh Grilles Fitting Instructions:


Kit Contents: -

- 1. off LH Grille
- 1. off RH Grille
- 4. off Retaining Brackets
- 4. off M4 x 20mm Pins



YouTube Tutorial: <https://www.youtube.com/watch?v=-EVVfbdfQcl>

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Offer the grille to the aperture and guide the brackets through the aperture (fig 1).
3. Tighten slightly, guide the rest of the grille into place (fig 2).
4. Once the grille is in place and central keep pressure on grille and secure the brackets (Use a screwdriver through the mesh to hold them in place and tighten) (fig 3 & 4).
5. Remove the tape and the grilles are now complete.

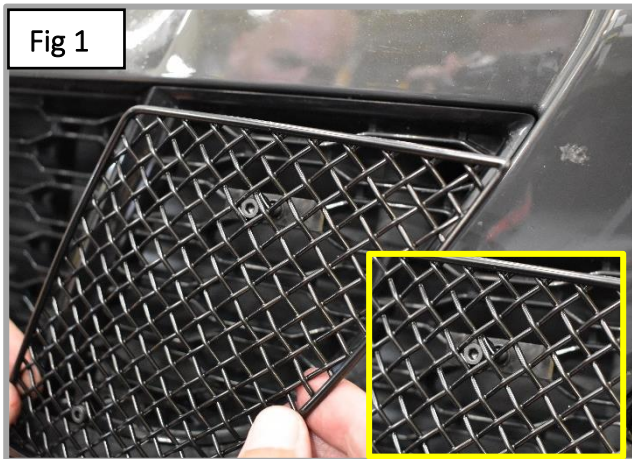

Centre Mesh Grille Fitting Instructions:**Kit Contents: -**

- 1. off Centre Grille
- 2. off Retaining Brackets
- 2. off M4 x 20mm Pins



1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Guide grille into the aperture, ensuring that the corner pieces go behind the plastic aperture (Fig 1). When guiding the grille to the aperture guide the brackets through the existing grille (Fig 2).
3. Once the grille is in place and central keep pressure on grille and tighten the retaining brackets (Use a screwdriver through the mesh to hold them in place and tighten) (fig 3 & fig 4).
4. Remove the tape and the grilles are now complete.

