

BMW G20 / G21 LCI M340i Xdrive Centre

Grille Fitting Instructions

Kit Contents: -

- 1. off Lower Centre Grille
- 4. off Retaining Brackets
- 4. off M4 x 20mm Pins



YouTube Tutorial: https://www.youtube.com/watch?v=UU_osM4mSgk

Centre Mesh Grille Fitting Instructions:

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Fit the toggle clamps through the grille.
3. Offer the grille to the aperture and locate the retaining brackets through the centre holes as shown in (fig 1 & 2).
4. Once the grille is in place and central, keep pressure on grille and tighten the screws into the retaining brackets making sure the grille stays central in the aperture. (DO NOT OVER TIGHTEN) (use a screwdriver through the mesh to hold the retaining brackets in place (fig 3,4 & 5).
5. Remove the tape and the grilles are now complete (fig 6).

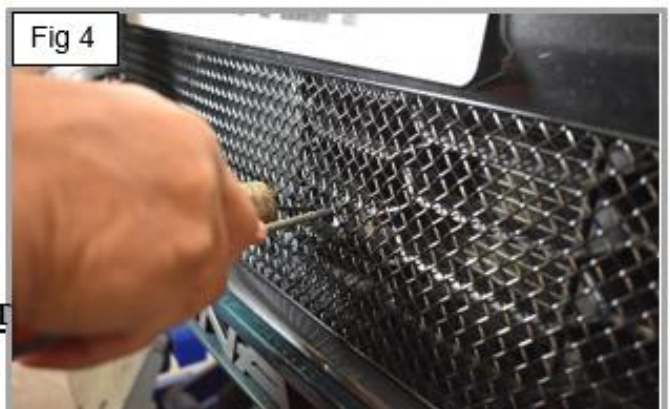


Fig 5



Fig 6

