

BMW F44 M235i xDrive Outer Grille Set

FITTING INSTRUCTIONS

Kit Contents: -



- 1. off L/H Outer Grille
- 1. off R/H Outer Grille
- 4. off M4 x 30 Pins
- 4. off Retaining Brackets



https://www.youtube.com/watch?v=euoZoS_ULKQ

Outer Grille Set Fitting Instructions:

- 1. Fit masking tape around the apertures to protect the paintwork while fitting.
- 2. Guide left hand side of the grille into aperture (Fig 1) and locate retaining brackets.
- 3. Centralise and secure grille (Fig 2) Tighten retaining brackets tighten using allen key through the mesh (Fig 3) **DO NOT OVER TIGHTEN.**
- 4. Repeat the process for the other outer grille.
- 5. Now remove masking tape and your grille set is complete.

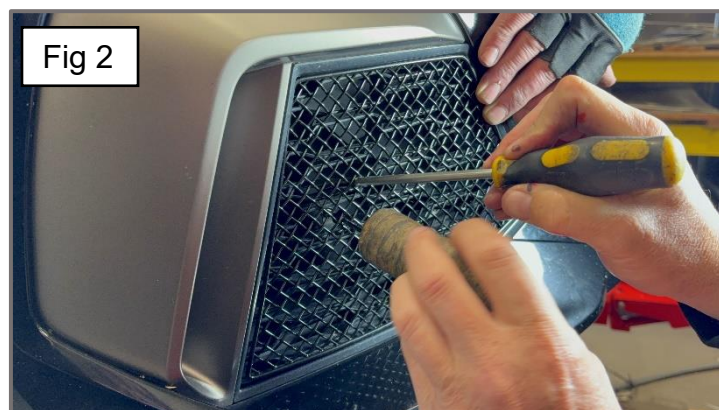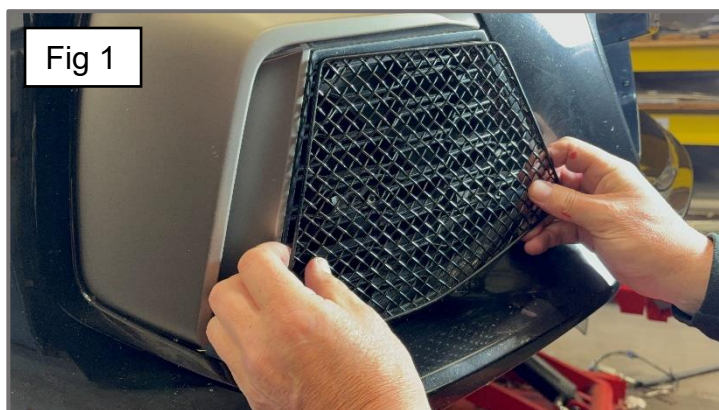

THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.