

# BMW Z 3

## Stainless Steel Sports Front Lower Grille


**Kit Contents: -**

- 1. off Lower Grille



**Lower Mesh Grille Fitting Instructions**

1. Remover number plate
2. Remove number plate plinth from vehicle.
3. Offer grille to the lower aperture hook the 2 brackets between the bumper and the existing backing plate. (If the brackets do not stay down it may be that they have been bent in transport, Just bend them so that they put a little pressure downwards and reinsert into the aperture)
4. Replace the number plate plinth.
5. Replace the Number plate.
6. Your grille assembly is now complete.

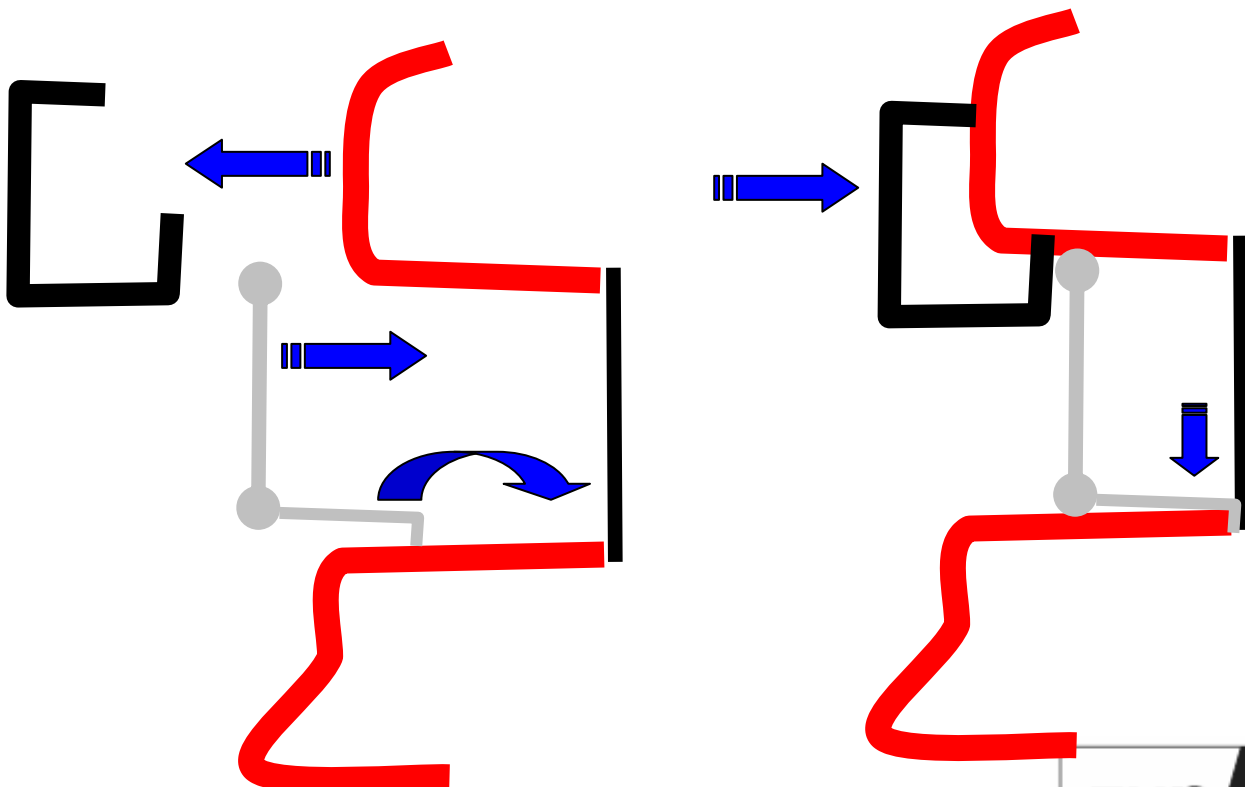

**THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.**