

# BMW Z 4

## Stainless Steel Sports Front Lower Grille


### Kit Contents: -

- 1. off Lower Grille
- 3. off Black Screws No.6 x ¾"



### Lower Mesh Grille Fitting Instructions

1. Fit Masking Tape to paintwork around and in the edges of the aperture to protect paint from accidental Scratches.
2. Offer grille to the lower aperture pushing the 2 lower brackets between the bumper and the existing backing plate.
3. Push one end of the grille into position making sure it is right into the corner. The other end of the grille can now be pushed back into position. (The grille is a tight fit from side to side so the masking tape is essential to avoid scratches as the corners are pushed back)
4. Fit the 3 screws through the square washers into the existing backing plate. (Do not over tighten)
5. Your grille assembly is now complete.

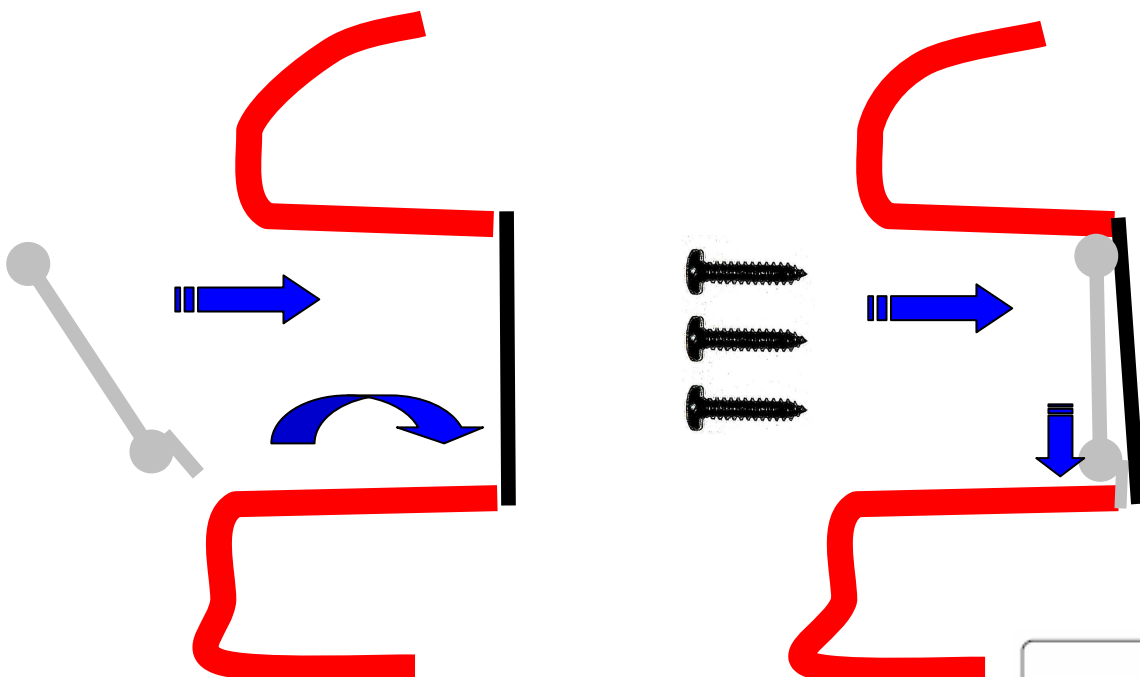

THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.