

Ford Ranger Tremor Upper Stainless-Steel Sports Grille Set

Kit Contents: -

- 1. off Upper Grille
- 4. off 1" Screws
- 1. off Centre Grilles
- 1. off Lower Grille
- 2. off 1.5" Screws
- 1. off 1" Screws



[YouTube Tutorial:](https://www.youtube.com/watch?v=V4MTx0O9wBw) <https://www.youtube.com/watch?v=V4MTx0O9wBw>


Upper Mesh Grille Fitting Instructions:

1. Fit masking tape just around the edges of the apertures to protect the paintwork while fitting.
2. Carefully guide the upper grille into the aperture making sure the brackets are hooked behind the aperture (fig 1).
3. Using the screws provided, screw the grille into the plastic moulding to secure the grille into place (Do not over tighten) (fig 2).



Centre Mesh Grilles Fitting Instructions:

1. For the centre grilles, guide the grille into the aperture ensuring the outer clip is engaged behind the aperture first (fig 3).
2. Using a screwdriver as shown in fig 4 push clips down making sure they locate behind the aperture & grille is secure.

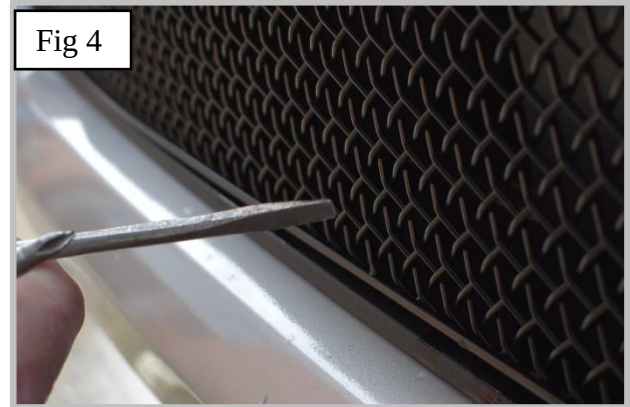

Lower Mesh Grille Fitting Instructions:

1. For the lower grille, guide the grille into the aperture ensuring it is central (fig 5).
2. **Using the screws provided, ensure the two 1.5" inch screws are used either side, and that the 1" screw is used in the centre to secure the grille** (fig 6).
3. Remove the tape and the grilles are now complete.

