

Ford Ranger Tremor Lower Stainless-Steel Sports Grille

Kit Contents: -

1. off Lower Grille
2. off No6 ¾ inch screws



YouTube Tutorial: <https://www.youtube.com/watch?v=0rcfd079cZw>



Lower Mesh Grille Fitting Instructions

1. Fit masking tape just around the edges of the apertures to protect the paintwork while fitting.
2. Carefully guide the grille into the aperture making sure the brackets are hooked behind the aperture (fig 1).
3. Using a screwdriver as shown in fig 2 push clips down making sure they locate behind the aperture & grille is secure.
4. Using the screws provided, screw the grille into the plastic moulding to secure the grille into place on either side (Do not over tighten) (fig 3).
5. Remove the tape and the grilles are now complete (fig 4).

Fig 1



Fig 2

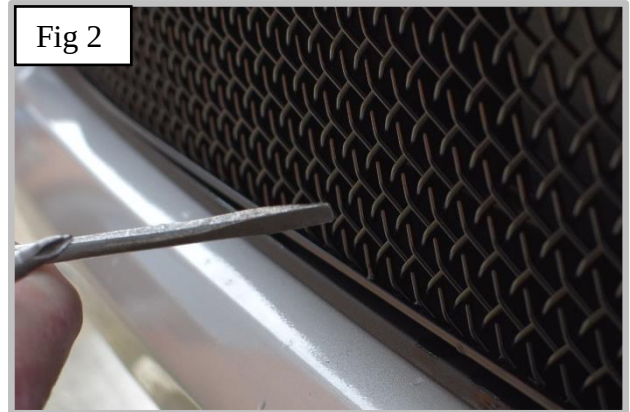


Fig 3



Fig 4

