

Ford Focus ST Stainless Steel Sports Grille Mesh Upper

Kit Contents: -

- 1. off Mesh Grille
- 4. off No.6 x 3/4" Screws
- 1. off Badge lifting Tool


Tools Required

P2 Screwdriver



Grille Fitting Instructions

1. Fit masking tape around aperture to protect paint.
2. Remove the tang from the moulded badge location, leaving the bottom edge in place.
3. Line up the new mesh grille keeping it as central as possible, hook the Upper fixings through the existing grille.
4. Holding the grille firmly in place and making sure it is central. Screw through the lower fixing U washers into the existing plastic. (Do not over tighten, just until the grille is held down)
5. With a flat screw driver push up the wire hooks inside the grille to make sure they are held in tightly.
6. The grille is now complete.
7. To open the bonnet, lift the badge away from the vehicle using the supplied tool. Then open as normal.

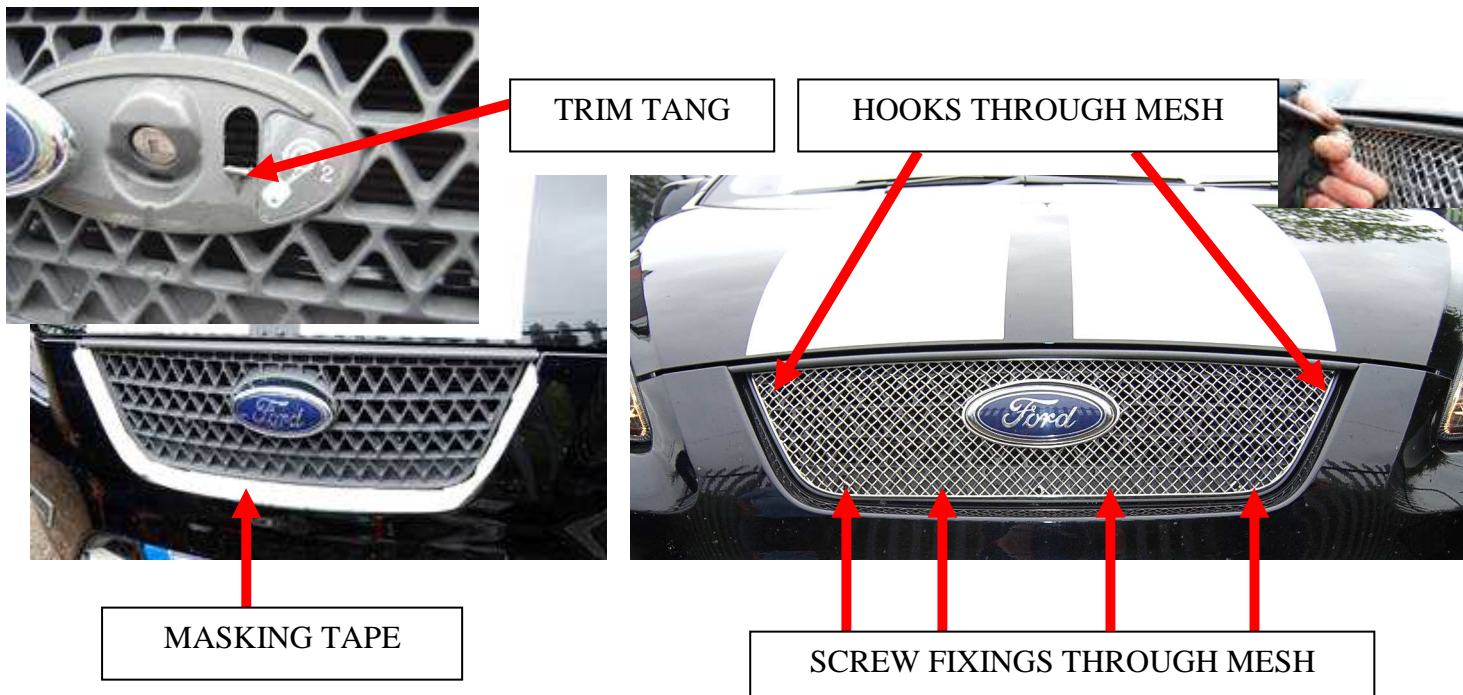

THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.