

Ford Mondeo TDCi ST 155 & ST 220 Stainless Steel Sports Grille Mesh Upper

Kit Contents: -

- 1. off Mesh Grille
- 4. off 4mm Allen Bolt
- 4. off 4mm Clamping Plate
- 1. off Badge Key




Tools Required

- Allen Key
- Screw Driver

Grille Fitting Instructions

1. Fit masking tape around aperture to protect paint, 5mm from existing mesh.
2. Remove the grille assembly from the vehicle buy removing the lock fixings from the top of the assembly under the bonnet. Pull the grille assembly forward to unclip at the bottom.
3. Remove the tang form the moulded badge location, leaving the bottom edge in place.
4. Line up the new mesh grille keeping it as central as possible.
5. Push the Allen bolts through the mesh into the 'U' Shaped brackets so that they go through the back of the existing mesh.
6. Fit the clamping plates to the back and lightly tighten the bolt with an Allen key
7. Check that everything is still central then fully tighten the bolts so that they hold firmly.
8. Replace the grille assembly check that the badge moves ok.
9. Remove the masking tape
10. The grille is now complete.

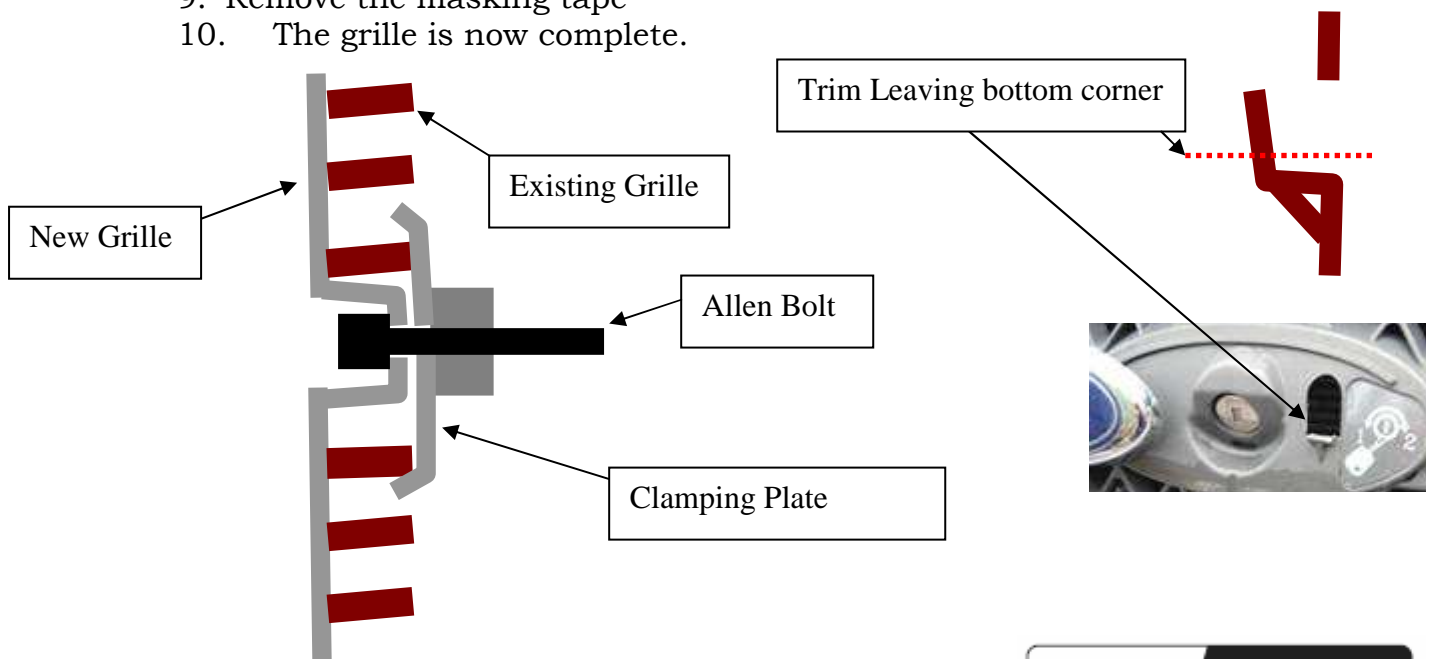

THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.