


Ford Transit Custom Stainless Steel Sports Lower Grille

Part No. ZFR50313 WITH TOWING EYE

Part No. ZFR49813 WITHOUT TOWING EYE

Kit Contents:

- 1 off Lower Grille
- 4 off No 6 x 1 ½" Screws

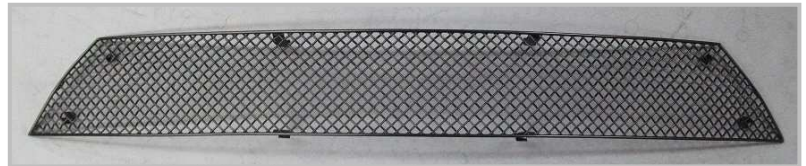

Lower Mesh Grille Fitting Instructions

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Locate grille to the aperture and guide upper centre brackets through the aperture.
3. Carefully push and guide the lower centre brackets behind the aperture and check they have engaged properly by using a thin screw driver as shown in fig 1.
4. Once the grille is securely in position fix the grill to the plastic using the 4 screws as shown in fig 2.
5. The Grilles are now complete.



THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.