

Ford Transit Van Upper Grille

Kit Contents:

- 1 off Lower Grille
- 4 off No 6 x 1" Screws
- Cable Ties



Tools Required:



Upper Aperture Removal:

1. Cut around outside aperture and clip smaller brackets to remove existing grille. Fig 1-2.
2. Your grille should now look like this. Fig 3.
3. Cut off the 3 bars and side plastic to remove the next part of the grille as shown. Fig 4-5.



Fig 1

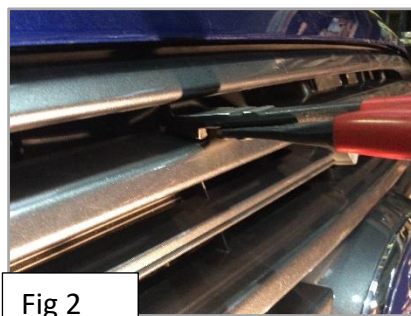


Fig 2



Fig 3

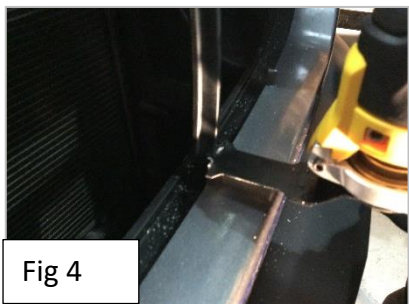


Fig 4

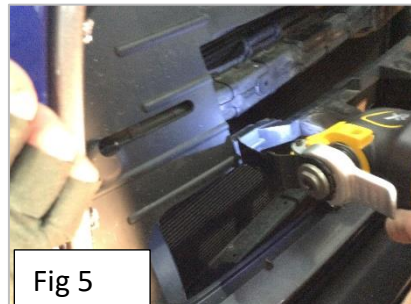


Fig 5



Fig 6

Upper Mesh Grille Fitting Instructions:

1. Fit masking tape around the apertures to protect the paintwork while fitting. Although this isn't shown, this is **highly recommended** as the grille may have sharp edges.
2. Carefully push and guide the lower centre brackets behind the aperture as shown in fig 8.
3. Once the grille is securely in position. Ensuring the bonnet lock has gone through the ring of the grille. fix the grill to the plastic using the 4 screws as shown in fig 9.
4. The Grilles are now complete.

Fig 8

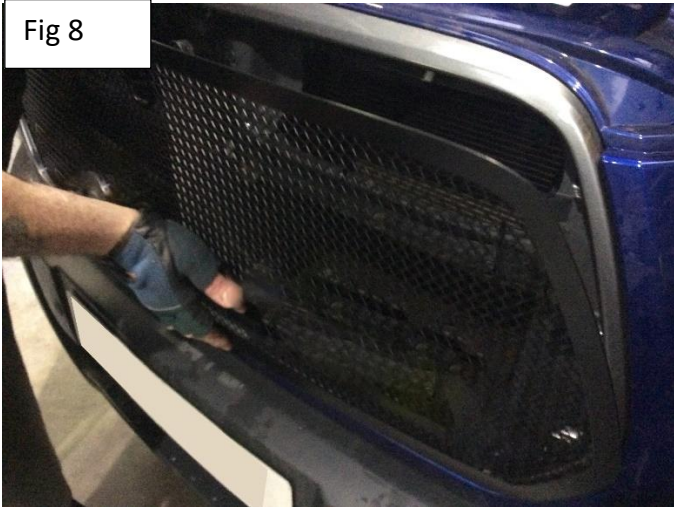


Fig 9

