

Ford Ranger MK7 (T8) Upper Grille

Kit Contents: -

- 1 off Upper Grille
- 5 off No 6 x ¾” Screws
- 1 off Trim Removal Tool





Upper Mesh Grille Fitting Instructions

<https://www.youtube.com/watch?v=AP7dybONvmo>

1. Your grille should now look like this.



- 2. Guide the grille carefully into the aperture and make sure the grille is centrally aligned as shown in Fig 1.
- 3. Screw the 5 ¾” screws through the grille, into the aperture as shown in Fig 2,3 & 4.
- 4. Your grilles are now complete.

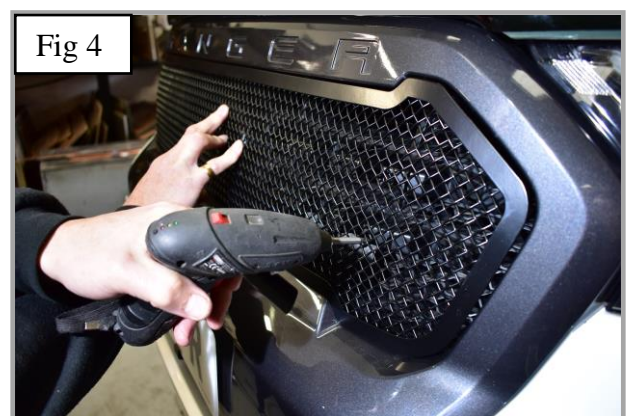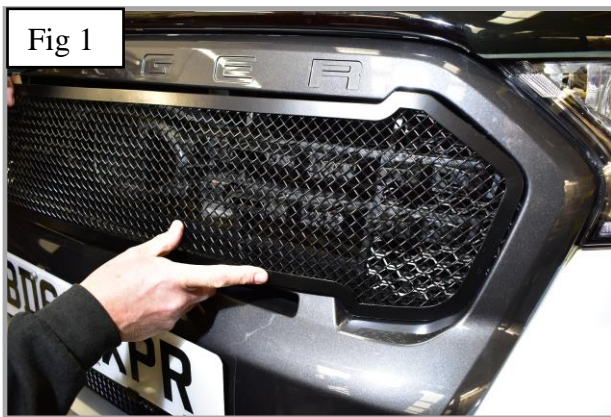

THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.