

FIAT GRANDE PUNTO

Stainless Steel Sports Front Grille Kit

Kit Contents: -

ZFT3506

1 off Upper Grille
1 off Lower Grille

ZFT7506

1 off Upper Grille

ZFT7606

1 off Lower Grille



Tools Required: -

Small Pliers
Screwdriver

Upper Mesh Grille Fitting Instructions


1. Remove the existing grille; these grilles can be removed from the front by pulling from one side at a time. The old parts can be kept for refitting later if required.
2. Place masking tape around the aperture to protect the paintwork while fitting the new grille.
3. Offer the grille to the aperture and locate the brackets into the existing slots on the bumper.
4. When you are sure the grille is in the correct central position push the grille into place until all of the brackets are fully engaged.
5. Your upper grille assembly is now complete.



Lower Mesh Grille Fitting Instructions

1. Remove the existing grille; these grilles can be removed from the front by pulling from one side at a time. The old parts can be kept for refitting later if required.

2. Place masking tape around the aperture to protect the paintwork while fitting the new grille.
3. Place the lower grille into the aperture letting the lower clips go over the existing plastic on the bumper. **DO NOT ENGAGE THE LOWER CLIPS WITH THE SLOTS AT THIS TIME.** *Fig.1*
4. Push the two upper centre clips into position through the existing slots. (note the clips fit tightly against the side of the slots to stop vibration when driving) *Fig.2*
5. Now push the two outer upper clips through the existing slots to complete the top. *Fig.2*
6. Pull lower part of the grille back out so that the lower clips can be pushed back into the actual slots, then push them fully home. (To pull the lower section back out you may need to use a small pair of pliers or attach some string to the mesh so that you can grip it, you may also need to push the plastic flange down through the mesh with a screwdriver if it gets caught) *Fig.2 & Fig.3*
7. Remove the masking tape.
8. Your Lower grille assembly is now complete.

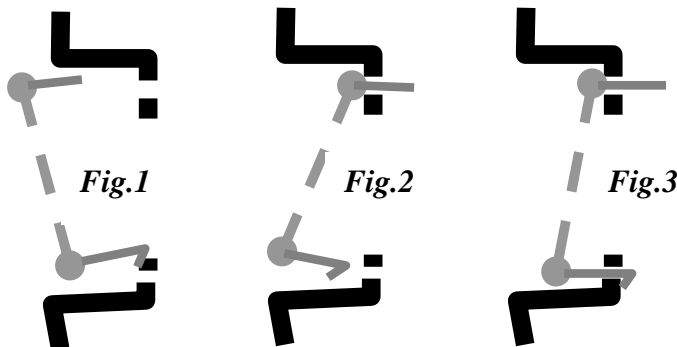

Fit Centre Upper clips first

Upper outer Clips second

