

Abarth 595

Centre Stainless Steel Grille Set

Kit Contents: -

- 1. off L/H Outer Grille
- 1. off R/H Outer Grille
- 1. off Centre Grille
- 2. off M3 Toggle Clamps
- 2. off M3 x 35mm Pan Head Screws






SCAN ME

YouTube Tutorial: <https://www.youtube.com/watch?v=2twBVsbOQtY>

Centre Grille Set Fitting Instructions:

Centre Grille

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Guide the grille into the aperture ensuring the grille is centralized in the aperture and that the clips engage (fig 1).
3. Using a thin screwdriver through the mesh, ensure the clips have engaged and the grille is secure in the aperture (fig 2,3,4).
4. Remove the tape and the grilles are now complete.

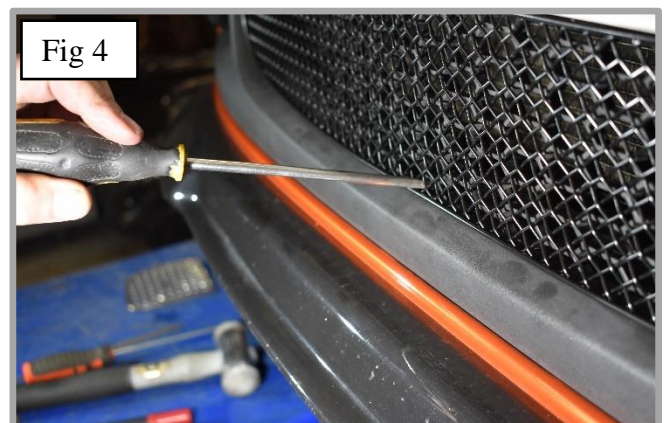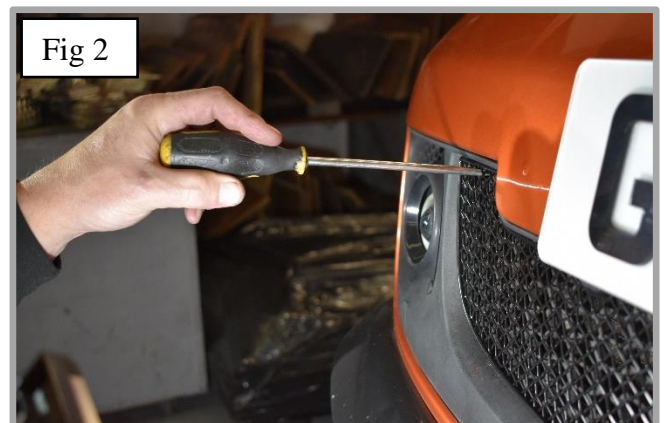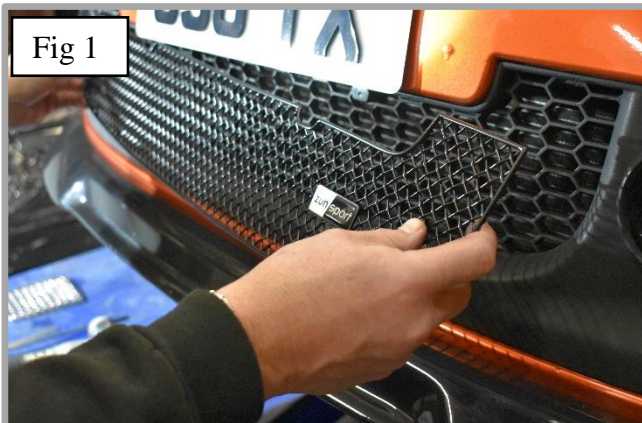

THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.

Outer Grille Set

- 1) Ensure the correct grille is selected, you can check this by ensuring the grille, labelled "R/H grille" goes on the right hand side of the vehicle, when looking straight on at the vehicle.
- 2) Guide the grille to the aperture and measure where the retaining bracket sits. Using a marker, mark up where on the OEM grille the retaining bracket will sit (fig 1 & 2)
- 3) Guide the grille into the aperture ensuring the retaining bracket fits into the OEM grille (fig 3 & 4)
- 4) Tighten the retaining bracket until secure, DO NOT OVER TIGHTEN (fig 5)
- 5) Repeat on the opposite side.
- 6) Grilles now complete (fig 6).

