

# Abarth 595

## Centre Stainless Steel Grille Set

**Kit Contents: -**

- 1. off L/H Outer Grille
- 1. off R/H Outer Grille
- 1. off Centre Grille
- 2. off M3 Toggle Clamps
- 2. off M3 x 25mm Pan Head Screws




[YouTube Tutorial;](#)

**Centre Grille Set Fitting Instructions:**

Centre Grille

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Guide the grille into the aperture ensuring the grille is centralized in the aperture and that the clips engage (fig 1).
3. Using a thin screwdriver through the mesh, ensure the clips have engaged and the grille is secure in the aperture (fig 2,3).
4. Remove the tape and the grilles are now complete.

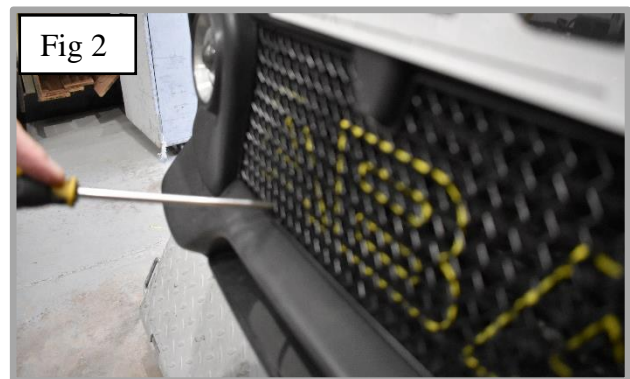

## Outer Grille Set

- 1) Guide the grille to the aperture and take note where the retaining bracket sits. On the OEM grille the retaining bracket will sit in the 4<sup>th</sup> hole up from the bottom, you can mark this up using tape (fig 1 & 2)
- 2) Guide the grille into the aperture ensuring the retaining bracket fits into the OEM grille and remove tape (if necessary) (fig 3)
- 3) Tighten the retaining bracket until secure, DO NOT OVER TIGHTEN (fig 4)
- 4) Repeat the same for the grille on the opposite side.
- 5) Grilles now complete (fig 6).

