

<u>HONDA S 2000</u> Stainless Steel Sports Grille Kit


Kit Contents: -

1. off Centre Grille



Mesh Grille Fitting Instructions

- 1. Put masking tape on painted surface of bumper where the brackets of the Mesh grille will run.
- 2. Locate the upper hooks of the grille into position through the existing grille.
- 3. Holding the grille with very light pressure to the bumper push the lower retraining brackets up to allow them to pass up into the aperture.(Do not push them up to far or they will not spring back)
- 4. Once all of the brackets are in the bumper aperture slowly push the lower half of the mesh grille back into the bumper until all of the brackets have clipped into the back of the existing grille. (Check with a torch that all of the brackets have engaged. If there are any that have not hooked into position use a long screwdriver to put pressure on the top of the bracket while putting pressure on the front of the grille)
- 5. Remove the masking tape and the grille is complete.

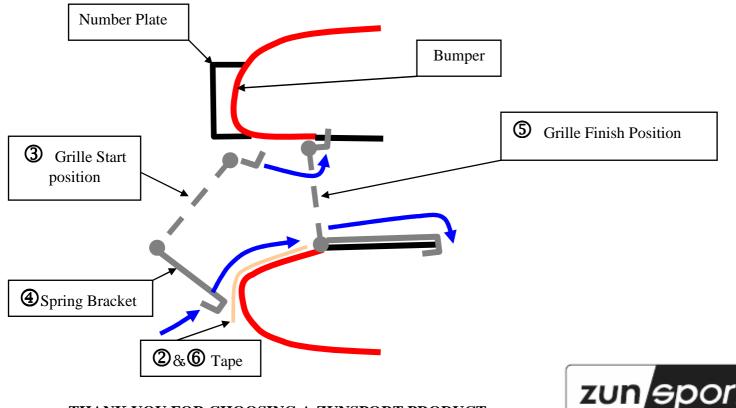

THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.