

# MAZDA MX5 Mk 2.5 ROADSTER Stainless Steel Sports Grille Kit

**Kit Contents: -**

- 1. off Centre Grille
- 1. off Plastic Fixing
- 1. off Upper Centre Bracket
- 2. off Upper Outer Bracket
- 1. off Lower Centre Bracket
- 2. off Lower Outer Bracket
- 6. off Allen Screws & Washers



**Tools Required: -**

Small Phillips Screwdriver (Not Included)




Ball Ended Allen Key (Included)



## Centre Mesh Grille Fitting Instructions

1. Using a PH 2 Screwdriver remove completely the 2 Bumper fixings from the upper inside section of the grille aperture. (If you feel behind the fixing you can push the pin out with your fingers to help unscrew the fixing)

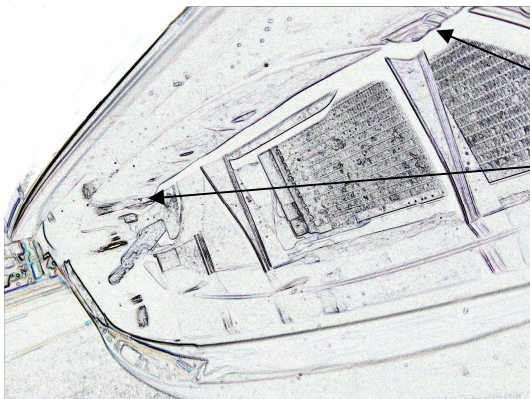


Press down to help  
remove






**THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.**

- Fix the upper brackets to the removed fixing and the fixing from the kit, replace the 2 outer fixings in their original position and place the new fixing into the centre hole on the reinforcement. (The fixings are push fit so will not require a screwdriver to refit)

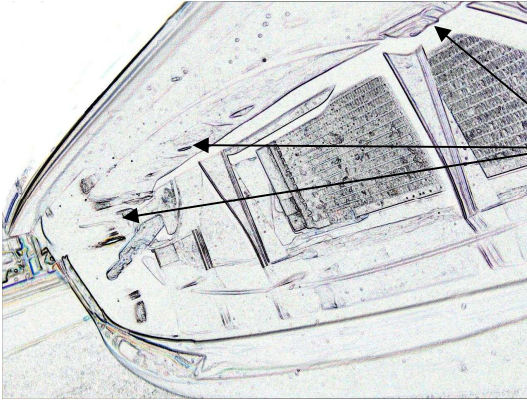


- Using the Mesh grille as a guide for position, prize the lower bumper skin away from the lower bumper reinforcement and insert the 3 lower fixing clips.

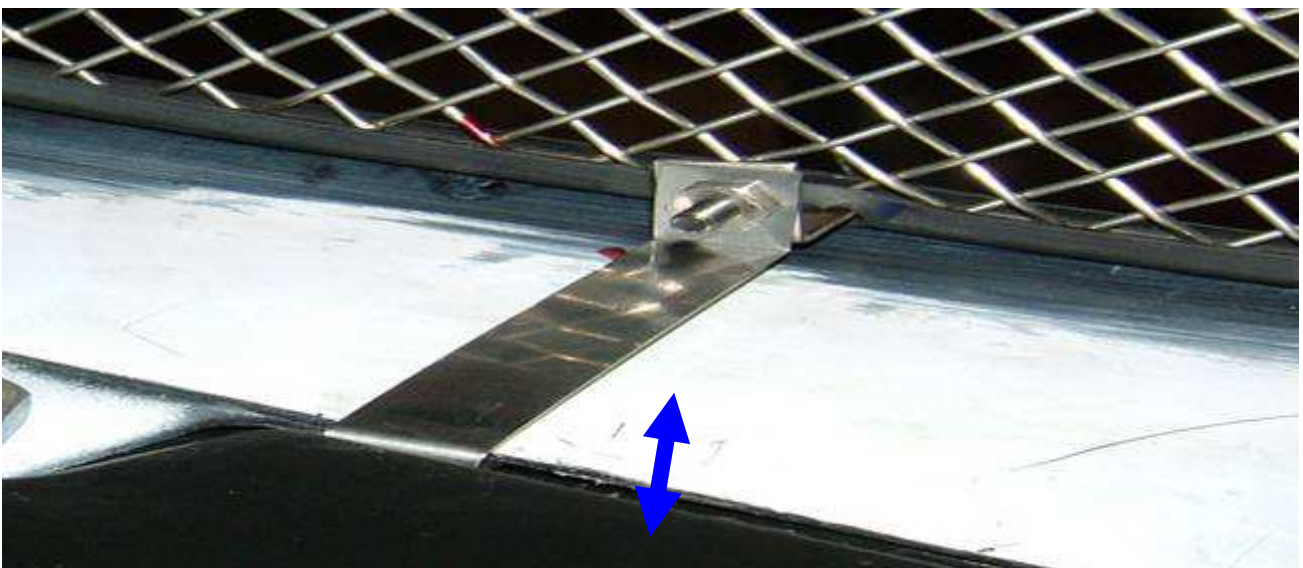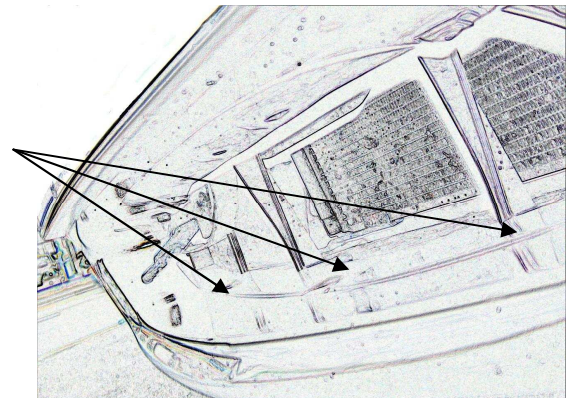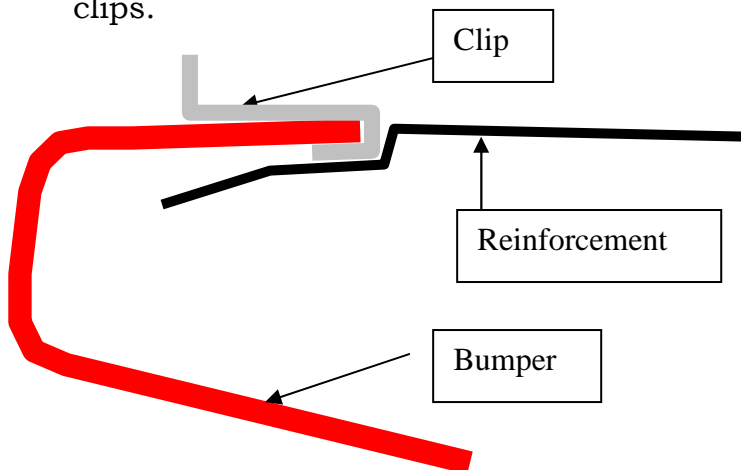

4. **IT IS ADVISED THAT THE RUBBER SURROUND IS LUBRICATED WITH “WASING UP LIQUID” TO AID FITTING.**

Insert the mesh grille with washers and nuts pre-attached into the brackets, placing the mesh behind the number plate plinth at the top first. Pressure may need to be applied to the lower part of the bumper mouth to enable the grille to move into position as they are a good fit and there may be some variation in the aperture size) If the number plate plinth is stopping the part from fitting try to ease it forward to allow the part to fit. (In some cases we have seen number plate plinths which go passed the fitting position of the mesh if this is the case remove and trim the plinth just enough to allow the mesh to go behind it). Align the brackets using a thin long screwdriver or similar, tighten the Allen screws using the key provided.

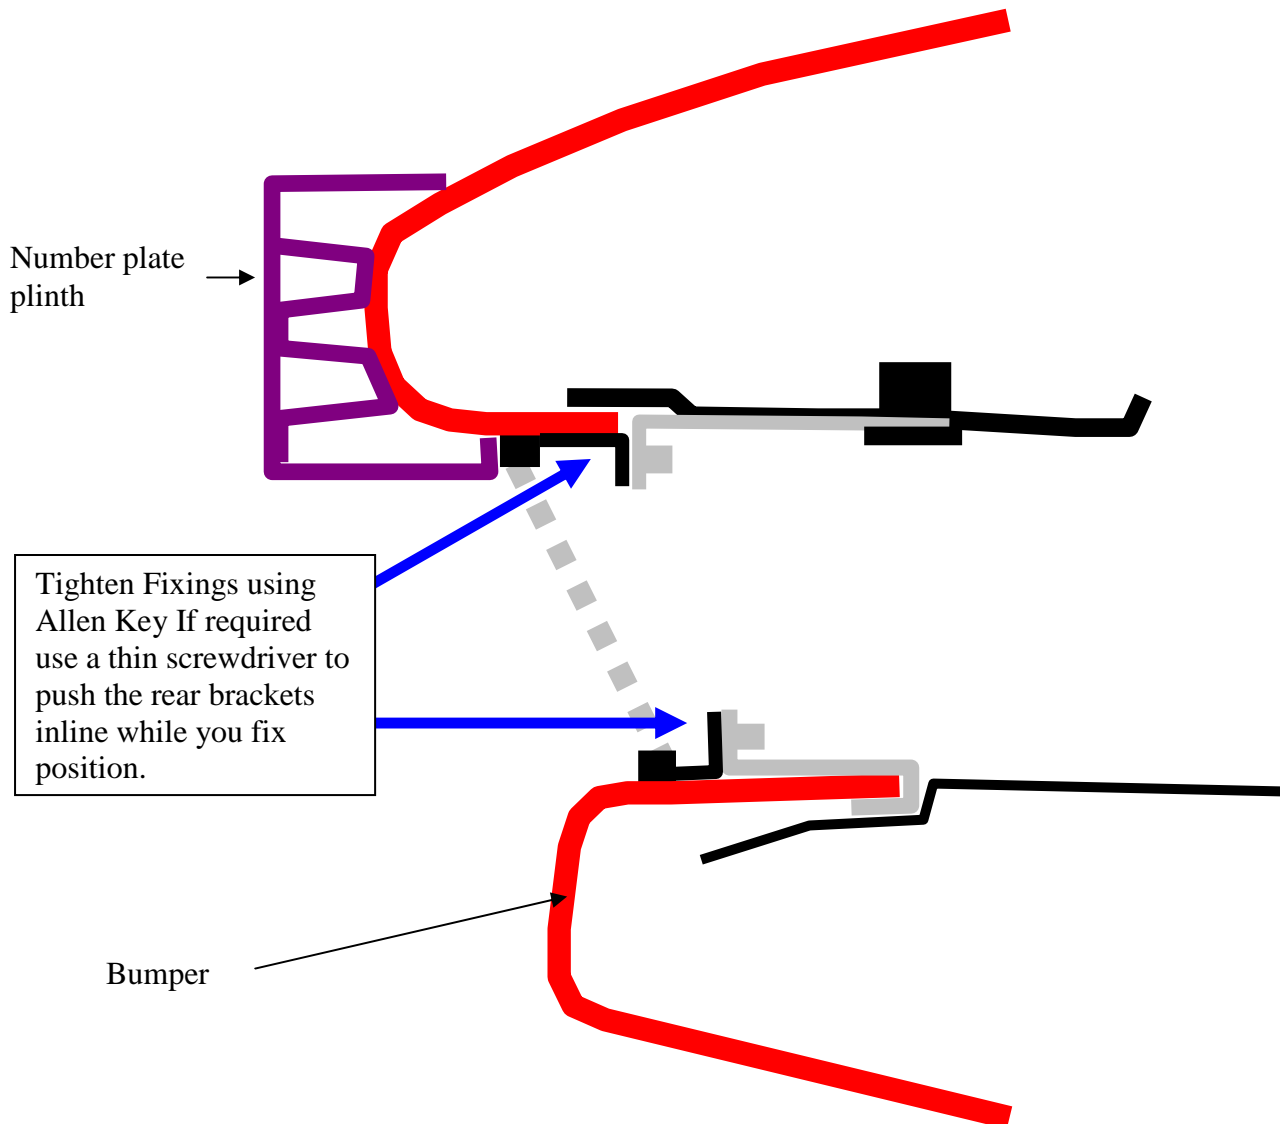

5. Now the grille is fitted check the rubber seal is still in position, if it has moved just push it back under the wire frame until it looks smooth.
6. Place the Allen Key in either the glove box or with the Car Tool Kit so that if the car needs to be towed the grille can be removed easily.