

Porsche Cayenne Turbo Pre-Facelift **Centre Stainless Steel Sports Grille**

Kit Contents:

1. off Centre Grille



[YouTube Fitting Tutorial:](#) scan QR code

Centre Mesh Grille Fitting Instructions:

1. Fit masking tape just around the edges of the apertures to protect the paintwork while fitting.
2. Carefully guide the grille into the aperture making sure the grille is centralized in the aperture (fig 1).
3. Secure the brackets have behind the aperture). (You can use a long thin screwdriver to make sure they are clipped in position (fig 2 & 3).
4. Remove the tape and the grilles are now complete.

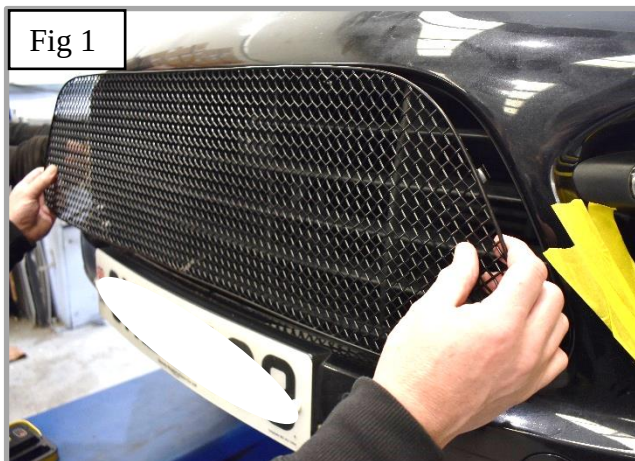


Fig 1



Fig 2

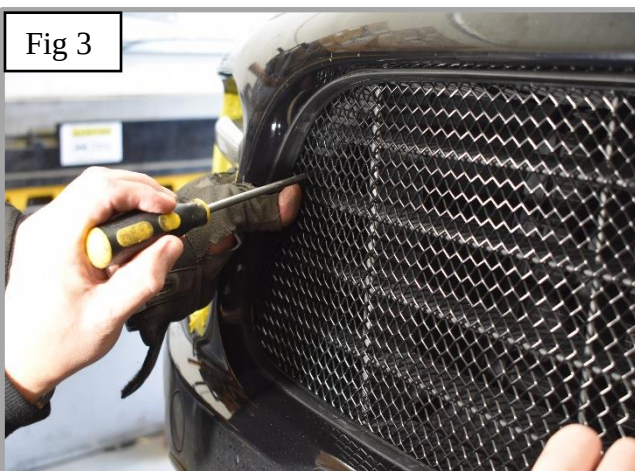


Fig 3



Fig 4