

Porsche 992.2 Carrera Base / T / S With Sports Design Pack Outer Stainless Steel Sports Grille Set

Kit Contents: -

- 1. off L/H Upper Outer Grille
- 1. off L/H Centre Outer Grille
- 1. off L/H Lower Outer Grille
- 1. off L/H Inner Outer Grille
- 1. off R/H Upper Outer Grille
- 1. off R/H Centre Outer Grille
- 1. off R/H Lower Outer Grille
- 1. off R/H Inner Outer Grille
- 2. off Retaining Brackets
- 2. off M4 x 20 pins



YouTube Tutorial: <https://www.youtube.com/watch?v=QERSUAm18BI>

PLEASE FIT GRILLES IN THE ORDER BELOW

Inner Mesh Grille Set Fitting Instructions

1. Guide the inner outer grille into the aperture, ensuring it is centralised (fig 1)
2. Use the open aperture and put your hand through so that you can hold the grille from the back, and secure the grille by tightening the retaining bracket, **DO NOT OVERTIGHTEN** (fig 2 & 3)
3. Repeat on the other side.

Outer Mesh Grille Set Fitting Instructions

1. Fit masking tape just around the edges of the apertures to protect the paintwork while fitting.
2. Carefully guide the **centre** outer grille into the aperture ensuring the clip is secured and the grille is central in the aperture (fig 4).
3. Using an allen key through the mesh, pull the grille outward so that it fits into the aperture correctly (fig 5).
4. Using a screwdriver through the mesh, secure the right-hand side, centre and opposite side clip on the grille (fig 6&7).
5. Carefully guide the **upper** outer grille into the aperture ensuring the clip is secured and the grille is central in the aperture (fig 8).
6. Using an allen key through the mesh, pull the grille outward so that you can secure the grille (fig 9).
7. Using a thin screwdriver through the mesh, secure the clips ensuring they are secured either side and the upper centre (fig 10,11 & 12).
8. Carefully guide the **lower** outer grille into the aperture ensuring the clip is secured and the grille is central in the aperture (fig 13).
9. Using an allen key through the mesh, pull the grille outward so that you can secure the grille (fig 14).

10. Using a thin screwdriver through the mesh, secure the clips ensuring they are secured either side (fig 15 & fig 16).
11. Remove the tape and the grilles are now complete (fig 17).

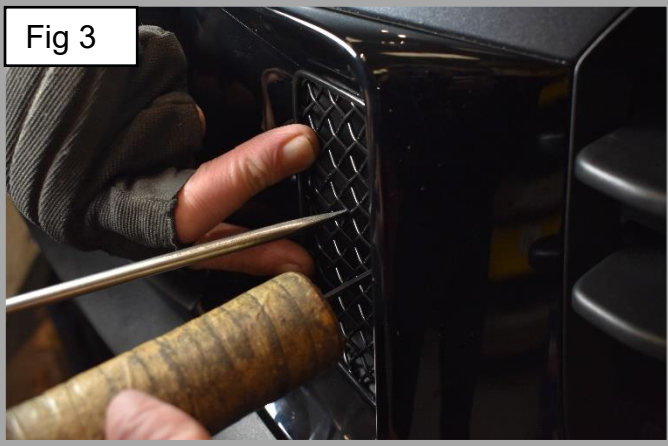
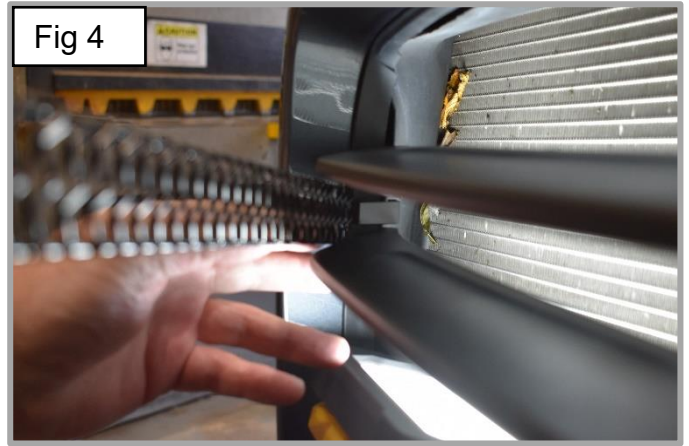
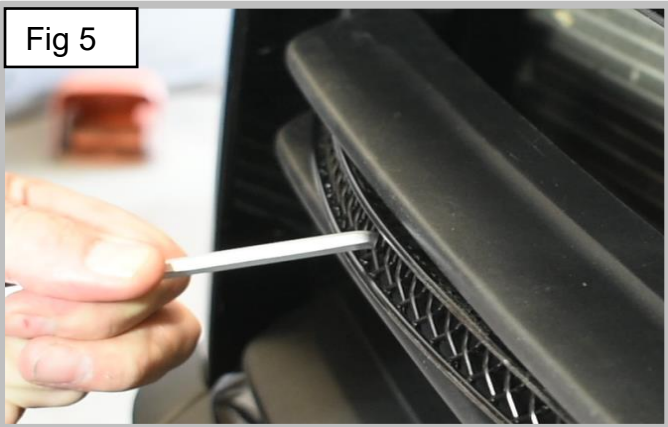
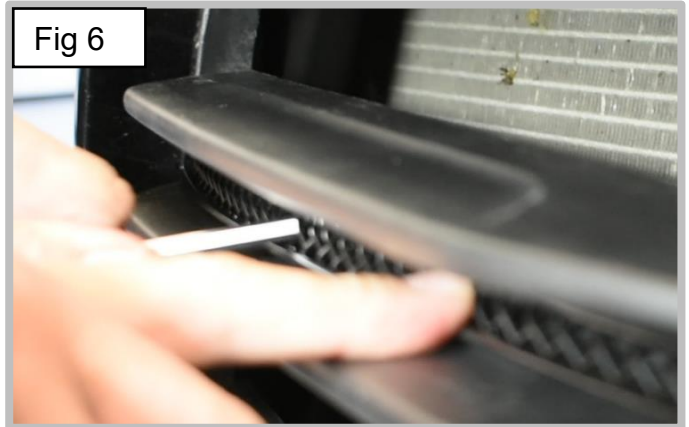
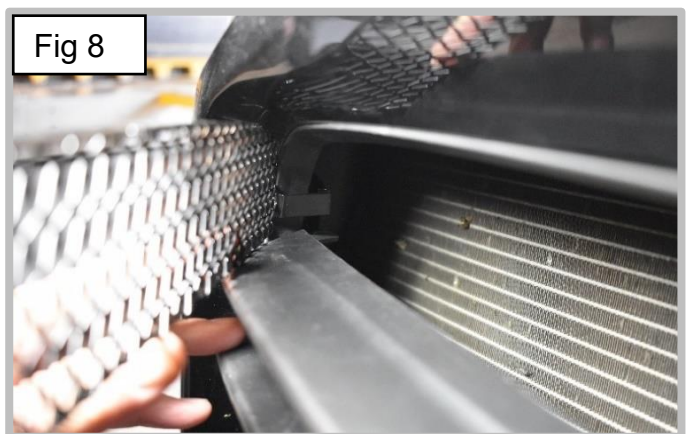
Fig 1**Fig 2****Fig 3****Fig 4****Fig 5****Fig 6****Fig 7****Fig 8**

Fig 9

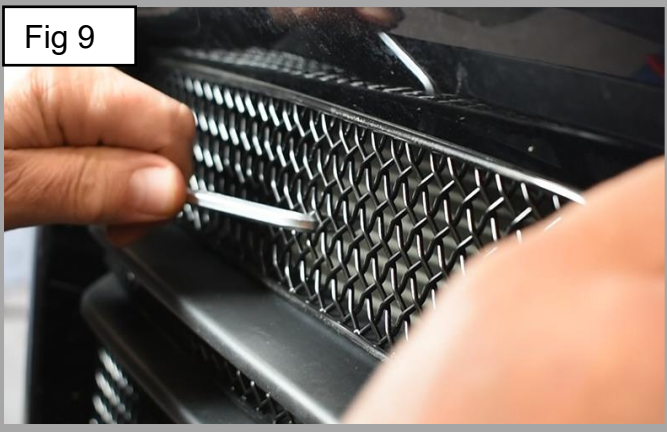


Fig 10

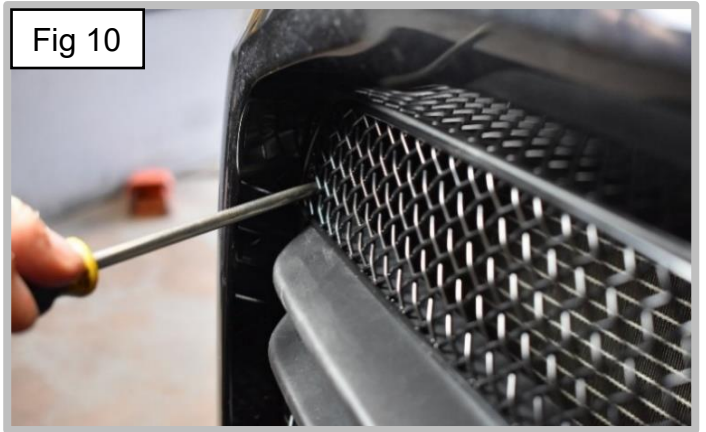


Fig 11



Fig 12



Fig 13

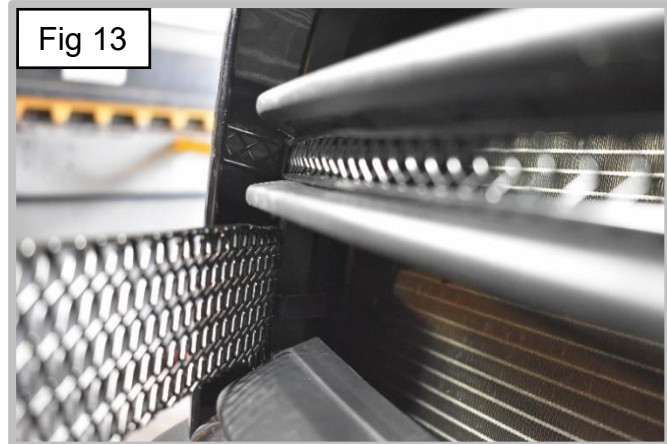


Fig 14



Fig 15

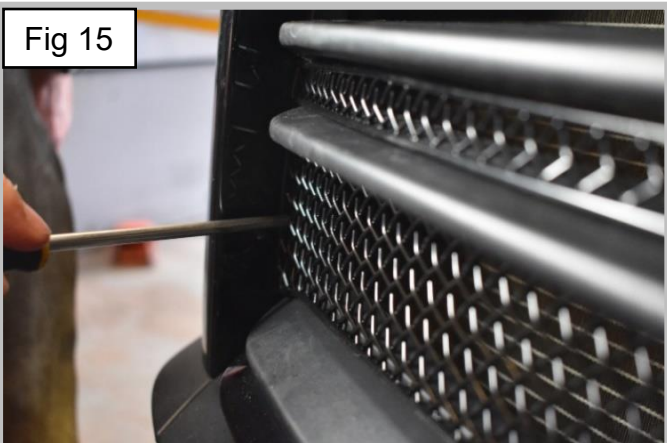


Fig 16



Fig 17

