

Porsche 981 Boxster PDK Stainless Steel Sports Side Grille Kit

Kit Contents: -

- 1. off LH Upper Grille
- 1. off LH Centre Grille
- 1. off LH Lower Grille
- 1. off RH Upper Grille
- 1. off RH Centre Grille
- 1. off RH Lower Grille



Upper Side Mesh Grille Fitting Instructions

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Locate clip behind the sensor as shown in fig 1 then clip into Position using your hand from behind as shown in fig 2.
3. Using a protective pair of pliers slightly bend the grille (fig 3) in the middle until the opposite end bracket clips into position.
4. The Grilles are now complete.



Fig 1

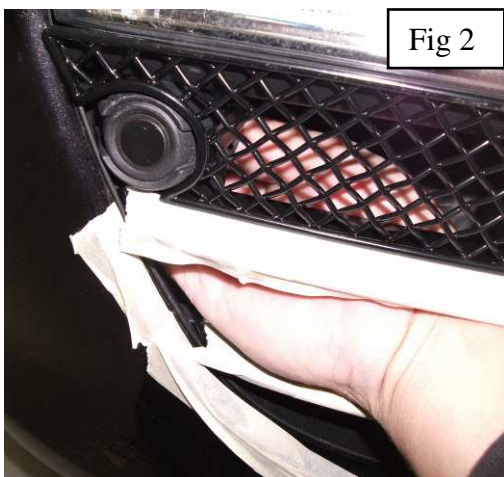


Fig 2

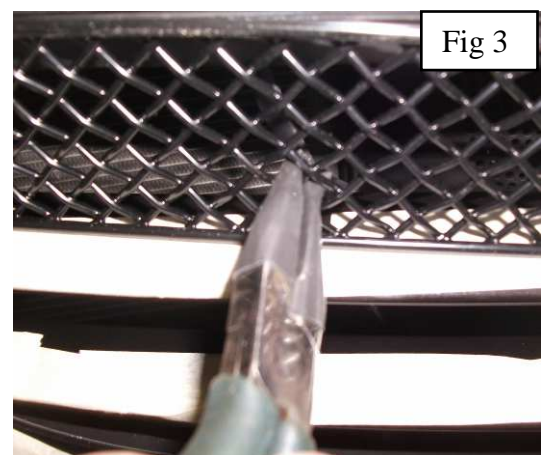


Fig 3

Lower Side Mesh Grille Fitting Instructions

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Firstly locate the inner bracket making sure it clips behind the aperture fig 1.
You can use a long thin screw driver to make sure it has clipped in position.
3. Gently push the front of the grille until the outer bracket clips into position fig 2.
4. The grilles are now complete



Fig 1



Fig 2

Centre Side Mesh Grille Fitting Instructions

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Firstly locate the outer hook behind the aperture fig 1.
3. Then guide the inner bracket behind the aperture until it clips into position fig 2.
You can use a long thin screw driver to make sure it has clipped in position
4. The grilles are now complete.



Fig 1



Fig 2