

Porsche 981 Boxster PDK (without parking sensors) **Stainless Steel Sports Side Grille Kit**

Kit Contents: -

- 1. off LH Upper Grille
- 1. off LH Centre Grille
- 1. off LH Lower Grille
- 1. off RH Upper Grille
- 1. off RH Centre Grille
- 1. off RH Lower Grille

**Upper Side Mesh Grille Fitting Instructions**

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Locate clip behind the aperture as shown in fig 1 then locate opposite end bracket behind aperture.
3. Using a protective pair of pliers slightly bend the grille (fig 3) in the middle until the opposite end bracket clips into position.
4. The Grilles are now complete.

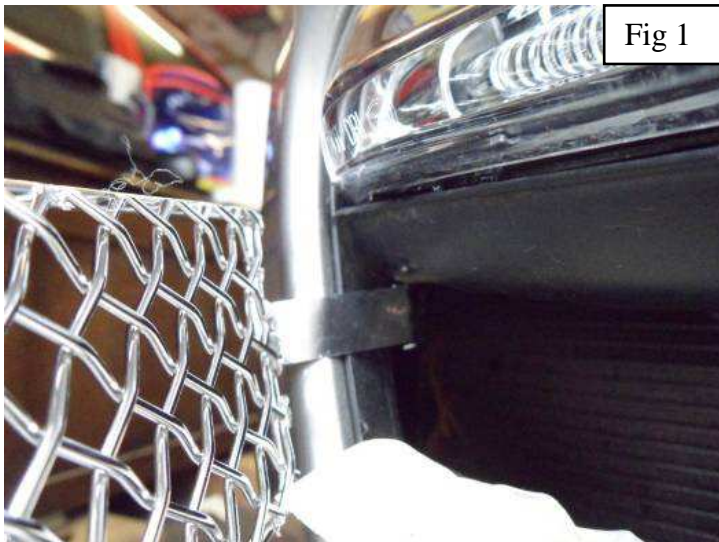


Fig 1

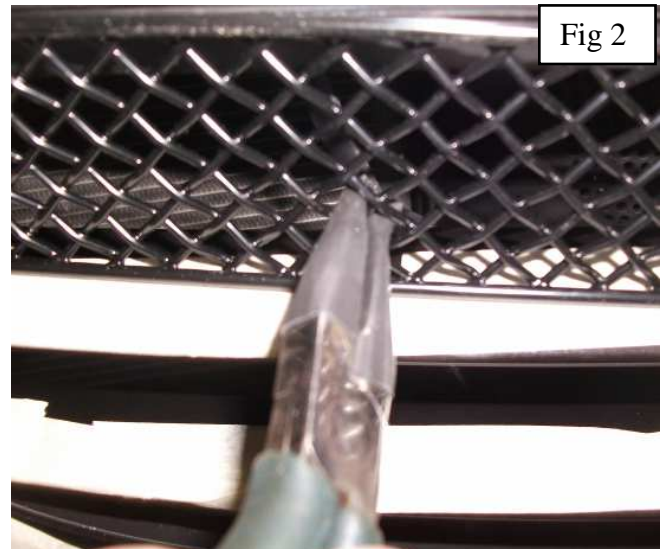


Fig 2

Lower Side Mesh Grille Fitting Instructions

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Firstly locate the inner bracket making sure it clips behind the aperture fig 1.
You can use a long thin screw driver to make sure it has clipped in position.
3. Gently push the front of the grille until the outer bracket clips into position fig 2.
4. The grilles are now complete



Fig 1



Fig 2

Centre Side Mesh Grille Fitting Instructions

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Firstly locate the outer hook behind the aperture fig 1.
3. Then guide the inner bracket behind the aperture until it clips into position fig 2.
You can use a long thin screw driver to make sure it has clipped in position
4. The grilles are now complete.



Fig 1



Fig 2