

Porsche Cayenne Gen 1 Stainless Steel Sports Grille Set

Kit Contents: -

- 1. off LH Upper Grille
- 1. off LH Lower Grille
- 1. off RH Upper Grille
- 1. off RH Lower Grille



Upper Side Mesh Grille Fitting Instructions

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Offer the grille to aperture and guide the lower brackets behind the aperture then carefully push the upper part of the grille so that the upper bracket locates behind the aperture (fig 1).
3. Using a thin screwdriver through the mesh lever all the brackets so they are tightly into position (fig 2).
4. Remove the tape and the grilles are now complete.



Fig 1

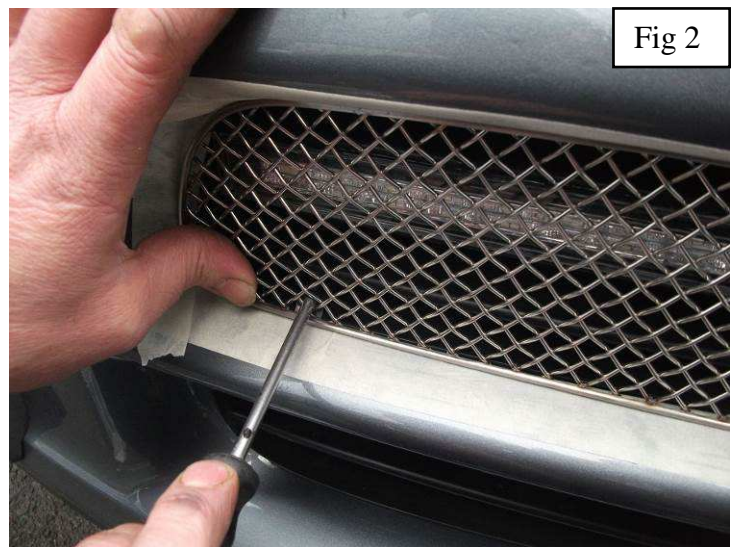


Fig 2

Lower Side Mesh Grille Fitting Instructions

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Firstly locate the outer Upper bracket making sure it clips behind the aperture fig 1.
3. Gently push the front of the grille until the lower bracket clips into position behind the aperture.
4. Using a thin screwdriver through the mesh lever all the brackets so they are tightly into position (fig 2).
5. Remove the tape and the grilles are now complete.

