

Porsche 981 Cayman S PDK Stainless Steel Sports Centre Grille

Kit Contents: -

- 1 off Centre Grille
- 1 off No 6 x 3/4" Screws



Centre Mesh Grille Fitting Instructions

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Carefully guide the Right hand Side of the grille into the aperture (Fig 1).
3. Once the right hand side is located guide the right hand side slightly flexing the grille to allow it to locate behind the aperture (Fig 2).
4. Using a screwdriver as shown in fig 3 push clips down making sure they locate behind the back aperture & grille is secure.
5. Insert the screw into the diamond through mesh and tighten down as shown in fig 4 (do not over tighten).
6. Remove the tape and the grilles are now complete.

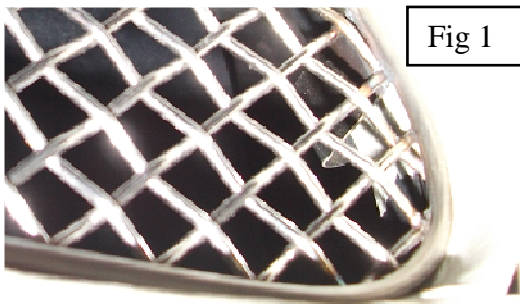


Fig 1

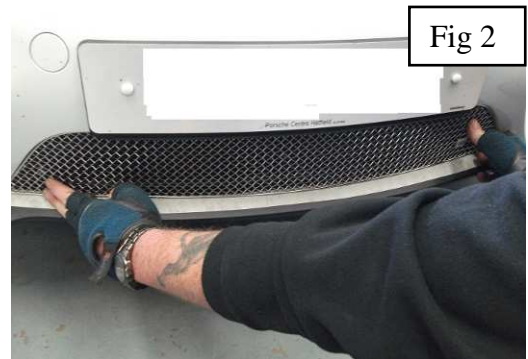


Fig 2



Fig 3



Fig 4