

## Porsche 981 Cayman S Manual & PDK Without Parking Sensors Stainless Steel Sports Side Grille Kit

### Kit Contents: -

- 1. off LH Upper Grille
- 1. off LH Centre Grille
- 1. off LH Lower Grille
- 1. off RH Upper Grille
- 1. off RH Centre Grille
- 1. off RH Lower Grille
- 4. off No6 x 3/4" Screws
- 2. off Grip Clips



### Lower Side Mesh Grille Fitting Instructions **(Please fit the grilles in this order)**

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Firstly locate the grille into the aperture as shown in fig 1, then mark the masking tape so it aligns the centre of the bracket which is on the grille (Fig 2).
3. Remove the grille then push the grip clip onto the aperture as shown in fig 3.
4. Carefully guide the grille back into the aperture making sure that the hook bracket is located behind the aperture and the other bracket has been pushed into the grip clip (holding grip clip in place whilst pushing grille in aperture fig 4). To ensure the grille is securely in place put your hand through the centre aperture (fig 5) and push centre of grille outwards whilst pushing inner of grille inwards.
5. Check that hook bracket is secure. (You can use a long thin screw driver to make sure it has clipped in position as in fig 6).
6. Repeat steps 1 - 6 to the opposite grille.
7. The grilles are now complete.



Fig 1

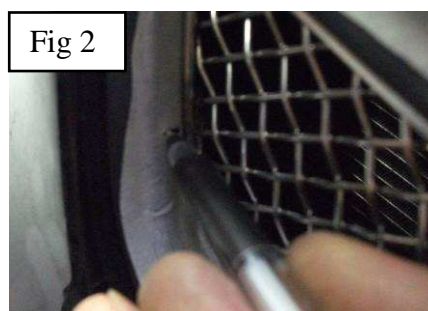


Fig 2



Fig 3



Fig 4



Fig 5



Fig 6

## Centre Side Mesh Grille Fitting Instructions

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Locate the grille into the aperture light & sensor end first as shown in fig 1 making sure the bracket locates behind the light.
3. Push the opposite bracket into position whilst holding the centre of the grille out with a pair of **protected pliers** and making sure bracket has clipped behind the aperture. (You can use a long thin screw driver through the mesh to make sure it has clipped in position).
4. Repeat steps 1, 2 and 3 to the opposite grille.
5. The grilles are now complete.


Fig 1



Fig 2



Fig 3

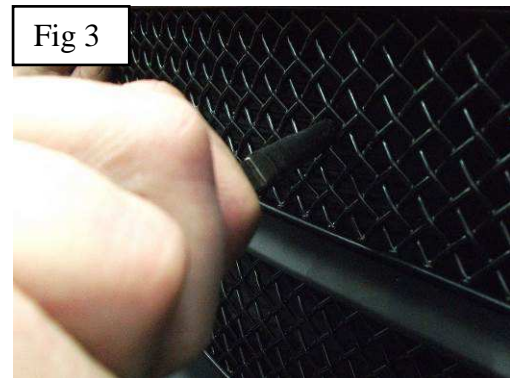

## Upper Side Mesh Grille Fitting Instructions

1. Fit masking tape around all of the apertures to protect the paintwork while fitting as shown in fig 1.
2. Locate Grille Level with aperture.
3. Insert the screw into the diamond through mesh and tighten down as shown in fig 2 then repeat to the other screw (do not over tighten).
4. Repeat steps 1, 2 and 3 to the opposite grille.
5. Remove the tape and the grilles are now complete.

Fig 1



Fig 2

