

Porsche 991 Turbo S Gen 1 Stainless Steel Sports Side Grille Kit

Kit Contents: -

- 1. off LH Upper Grille
- 1. off LH Centre Grille
- 1. off LH Lower Grille
- 1. off RH Upper Grille
- 1. off RH Centre Grille
- 1. off RH Lower Grille
- 2. off Grip Clips

(You Must Fit The Grilles In This Order)


Lower Side Mesh Grille Fitting Instructions

Fitting Video Links:-

<https://www.youtube.com/watch?v=g7if6Ljkh1I&feature=youtu.be>



1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Locate the grille centrally in the aperture guiding the outer part of grille in 1st and making sure it is pushed flush against the aperture (fig 1) Locate clip behind the aperture and then clip into Position using your hand from behind as shown in fig 2.
3. Hold the grille in position then push the grip clip onto the bracket and the plastic aperture (fig 3 & 4) so that they grille and plastic are held together tightly.

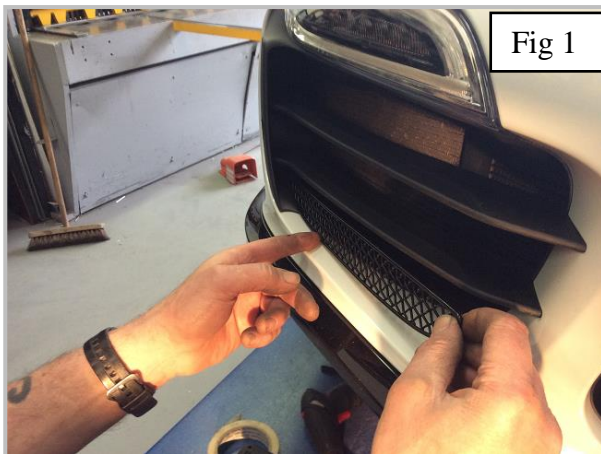


THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.

Upper Side Mesh Grille Fitting Instructions

Fitting Video Links:-

<https://www.youtube.com/watch?v=6Rkyv2aVTXI&feature=youtu.be>

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Firstly locate the outer bracket making sure it clips behind the aperture fig 1.
3. Gently push the front of the grille until the inner bracket clips into position fig 2.
4. You can use a long thin screw driver to make sure the brackets have clipped in position (fig 3 & 4).

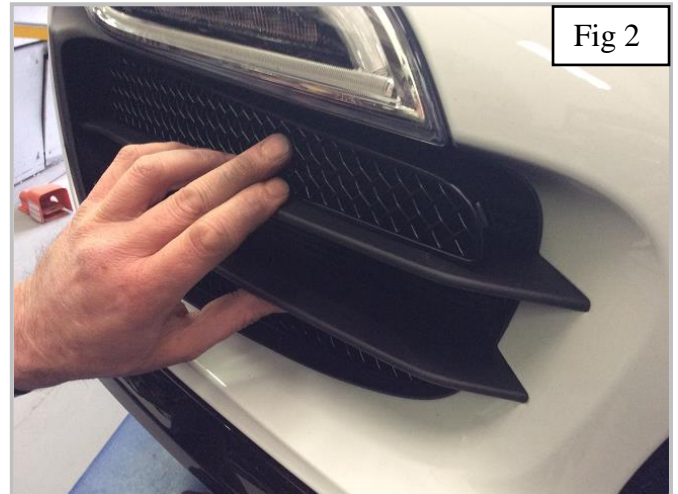

Centre Side Mesh Grille Fitting Instructions**Fitting Video Links:-**

https://www.youtube.com/watch?v=1Jf9R9TJ_5A&feature=youtu.be

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Firstly locate the outer part of the grille behind the aperture fig 1.
3. Then guide the inner bracket behind the aperture until it clips into position fig 2.
4. You can use a long thin screw driver to make sure it has clipped in position (fig 3)
5. The grilles are now complete.

