

# Porsche 991 Turbo & Turbo S Gen 1 Stainless Steel Sports Centre Grille

## Kit Contents: -

- 1. off Centre RH Side Grille
- 1. off Grip Clip
- 2. off No6 x 3/4" Screws



## Centre Mesh Grille Set Fitting Instructions

### Fitting Video Links:-

<https://www.youtube.com/watch?v=jwecqGBZHmDM&feature=youtu.be>

1. Fit masking tape around the apertures to protect the paintwork while fitting (fig 1).
2. Remove number plate plinth.
3. First feed the grille into aperture as shown in fig 2.
4. Mark the masking tape to align with the centre of the bracket on the back of the grille then remove the grille (fig 3).
5. Attach the grip clip centrally to the moulding so it is fixed securely (fig 4) **(make sure that the grip clip is attached with the greater length on the clip is at the top which is circled blue).** (fig 4a).
6. Feed the grille back into the aperture except this time make sure the bracket on the grille is pushed into the grip clip on the moulding (fig 5).
7. Insert the screw into the diamond through mesh and tighten down as shown in fig 6 then repeat to the opposite diamond (do not over tighten).



Fig 1

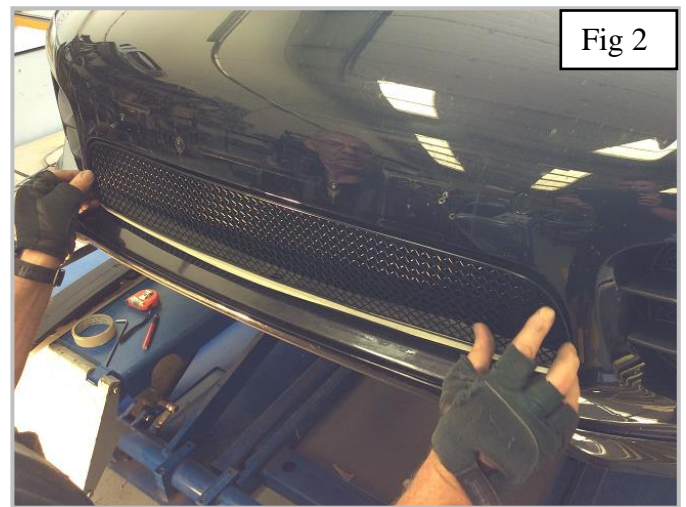


Fig 2

