

Porsche 991.1 GTS Stainless Steel Sports Outer Grille Kit (Without Parking Sensors)

Kit Contents: -

- 1. off LH Upper Grille
- 1. off LH Centre Grille
- 1. off LH Lower Grille
- 1. off RH Upper Grille
- 1. off RH Centre Grille
- 1. off RH Lower Grille
- 2. off Grip Clips



(You Must Fit The Grilles In This Order)

Upper Side Mesh Grille Fitting Instructions

Fitting Video Links:- <https://www.youtube.com/watch?v=QmATYA7-88A&t>

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Locate the grille into the aperture inner end first as shown in fig 1 making sure the bracket locates behind the aperture.
3. Whilst holding the grille in position apply a little pressure and slightly flex the grille so the outer bracket clips behind the aperture (fig 2).
4. Make sure brackets have engaged behind aperture, use a long thin screw driver to make sure the brackets have clipped in position (fig 3)

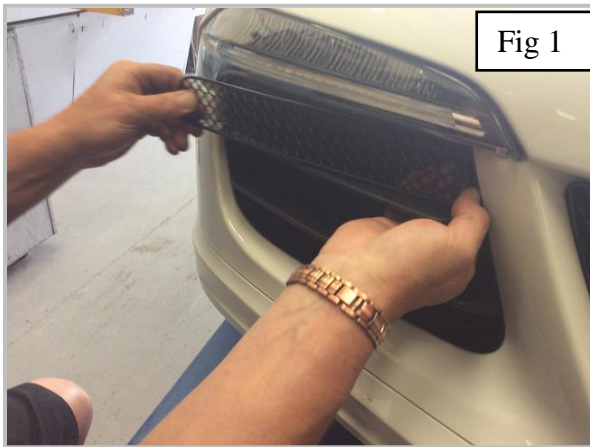


Fig 1



Fig 2



Fig 3

THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.

Centre Side Mesh Grille Fitting Instructions

Fitting Video Links:- <https://www.youtube.com/watch?v=QmATYA7-88A&t>

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Firstly guide the grille through the aperture fig 1 making sure the bracket has hooked behind the aperture.
3. Position the grille so it is central in the aperture (fig 2) then attach the grip clips (fig 3).
4. Hold the grille in position then push the grip clip onto the bracket and the plastic aperture (fig 3 & 4) so that they grille and plastic are held together tightly.
5. Make sure inner brackets have engaged behind aperture, use a long thin screw driver to make sure the brackets have clipped in position.



Fig 1



Fig 2



Fig 3



Fig 4

Please make sure the grip clips attaches to the existing plastic on the car and the grille bracket pushes on to the grip clip also.



Fig 5

Lower Side Mesh Grille Fitting Instructions

Fitting Video Links:- <https://www.youtube.com/watch?v=QmATYA7-88A&t>

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Firstly locate the outer part of the grille behind the aperture fig 1.
3. Then guide the inner bracket behind the aperture until it clips into position fig 2. (you may have to apply a little pressure and slightly flex the grille to get it to locate correctly).
4. You can use a long thin screw driver to make sure it has clipped in position (fig 3 & 4)
5. The grilles are now complete.

