

Porsche 991 Carrera C2S Stainless Steel Outer Grille Kit (With Parking Sensors)

Kit Contents: -



- 1. off LH Upper Grille
- 1. off LH Centre Grille
- 1. off LH Lower Grille
- 1. off RH Upper Grille
- 1. off RH Centre Grille
- 1. off RH Lower Grille



<https://www.youtube.com/watch?v=IBWlxBfx36U&feature=youtu.be>

Lower Side Mesh Grille Fitting Instructions (Please fit the grilles in this order)


1. Fit masking tape around all of the apertures to protect the paintwork while fitting as shown in fig 1.
2. Guide the Grille into the aperture making sure the brackets have hooked behind the aperture (Fig 2) You can use a long thin screw driver to make sure it has clipped in position or by putting your hand through the centre aperture and pull the grille into position) (Fig 3 & 4).
3. Repeat steps 1 and 2 to the opposite grille.
4. Remove the tape and the grilles are now complete.

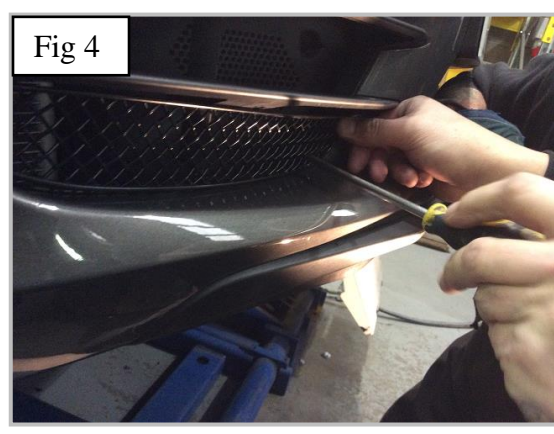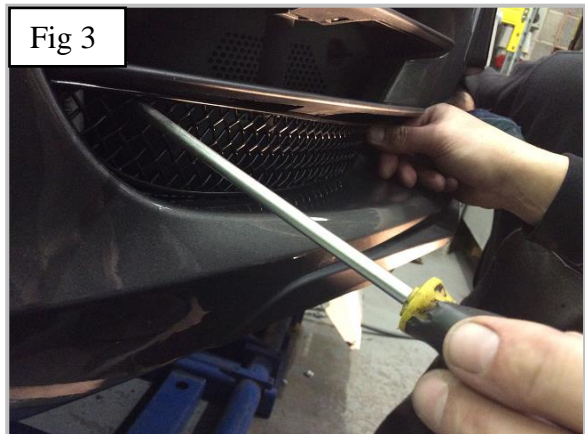

THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.

Centre Side Mesh Grille Fitting Instructions

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Guide the Grille into the aperture (Fig 1) making sure the brackets have hooked behind the apertures (Fig 2 & 3) (You can use a long thin screw driver to make sure it has clipped in position or by putting your hand through the centre aperture and pull the grille into position).
3. Repeat steps 1 and 2 to the opposite grille.
4. The grilles are now complete.

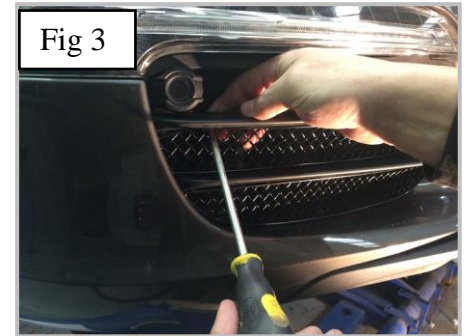

Upper Side Mesh Grille Fitting Instructions

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Guide the Grille into the aperture (Fig 1) making sure the brackets have hooked behind the aperture and the one bracket needs to hook behind the sensor (Fig 2 & 3) (You can use a long thin screw driver to make sure it has clipped in position or by putting your hand through the centre aperture and pull the grille into position).
3. Repeat steps 1 and 2 to the opposite grille.
4. The grilles are now complete.

